


SPECTRA[®]
1759MG V2.0



Reference & Installation Manual
(433MHz / 868MHz)

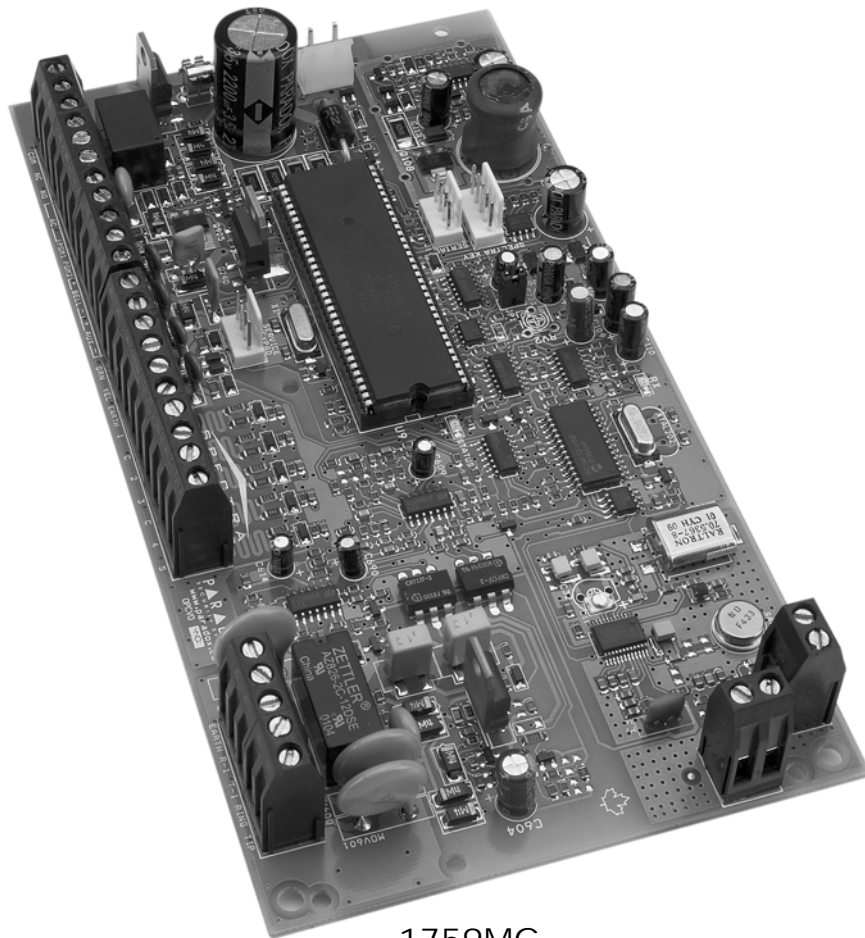

1759MG

Table of Contents

| | | | |
|---|-----------|---|-----------|
| Introduction | 1 | Exit Delay | 24 |
| Features..... | 1 | Bell Squawk On Arm/Disarm with Keypad | 24 |
| Specifications..... | 1 | Bell Squawk On Arm/Disarm with Remote Control | 24 |
| Installation | 2 | No Exit Delay When Arming with Remote Control | 24 |
| Location and Mounting | 2 | No Exit Delay Beeps and No Bell Squawk When Stay Arming | 25 |
| Earth Ground | 2 | Alarm Options | 25 |
| AC Power..... | 2 | Bell Cut-Off Timer..... | 25 |
| Backup Battery | 2 | Recycle Alarm | 25 |
| Auxiliary Power Terminals*..... | 4 | Tamper Recognition | 25 |
| Telephone Line Connection..... | 4 | Keypad Panic Options..... | 26 |
| Bell Output Connection..... | 4 | Panic Lockout Timer..... | 26 |
| Programmable Output Connections* | 4 | Reporting and Dialer settings | 27 |
| Single Zone Inputs..... | 5 | Reporting/Dialer (Enable/Disable)..... | 28 |
| Keypad and Keypad Zone Connections | 5 | Report Codes | 28 |
| Keyswitch Connections..... | 6 | Monitoring Station Telephone Numbers..... | 30 |
| Fire Circuits..... | 6 | Partition Account Numbers..... | 30 |
| Programming Methods | 7 | Reporting Formats..... | 30 |
| WinLoad Software for Windows* | 7 | Pager Delay..... | 32 |
| Programming Using a Keypad..... | 7 | Event Call Direction..... | 32 |
| Configuring The LED Keypad | 8 | Dialing Method | 32 |
| Programming Using A Paradox Memory Key*..... | 9 | Pulse Ratio | 32 |
| Access Codes | 10 | Bell on Communication Failure | 32 |
| Access Code Length..... | 10 | Dial Tone Delay..... | 32 |
| Installer Code (Default: 0000 / 000000)..... | 10 | Maximum Dialing Attempts..... | 33 |
| System Master Code (Default: 1234 / 123456)..... | 10 | Delay Between Dialing Attempts | 33 |
| User Code Options | 10 | Alternate Dial Option | 33 |
| Lock Master Code..... | 11 | Recent Close Delay..... | 33 |
| Duress Code..... | 11 | Auto Test Report | 33 |
| Zone Programming | 12 | Closing Delinquency Timer | 33 |
| What is an Expansion Input? | 12 | Power Failure Report Delay | 33 |
| Reassign Keypad Zone 2 | 12 | Disarm Reporting Options | 33 |
| Reassign Zones to Expansion Inputs | 13 | Zone Restore Report Options | 34 |
| Zone Programming..... | 13 | Telephone Line Monitoring (TLM) | 34 |
| Zone Definitions..... | 13 | Programmable Outputs | 34 |
| Exclusive Zone Definitions..... | 14 | PGM Activation Event | 34 |
| Programming a Wireless Fire Zone | 15 | PGM Deactivation Event | 35 |
| Zone Partition Assignment..... | 15 | PGM Delay | 35 |
| Zone Options | 16 | PGM Normal State | 35 |
| Zone Speed | 17 | PGM2 Strobe Options | 35 |
| EOL Zones..... | 17 | Alarm Relay Options | 35 |
| Wireless Features | 18 | System Settings | 36 |
| Wireless Transmitter Programming | 18 | Hardware Reset | 36 |
| Viewing the Wireless Transmitter Signal Strength..... | 19 | Installer Lock | 36 |
| Serial Number Display | 19 | Keypad Lockout Feature | 36 |
| Supervision Options..... | 19 | Battery Charge Current | 36 |
| Remote Control Programming | 20 | Partitioning | 36 |
| Arming and Disarming Options | 22 | System Real-Time Clock..... | 36 |
| Switch To Stay Arming | 22 | Clock Adjust | 36 |
| Stay Arming with Delay..... | 22 | Keypad Tamper Supervision | 37 |
| Regular Arming Switches to Force Arming | | Keypad Audible Trouble Warning..... | 37 |
| (Not to be used with UL Installations) | 23 | Confidential Mode | 37 |
| Restrict Arming on Battery Fail | 23 | Installer Quick Functions Keys | 38 |
| Restrict Arming on Tamper Failure | 23 | PGM Modules Supervision..... | 38 |
| Timed Auto-Arming..... | 23 | Printer Module Supervision | 38 |
| No Movement Auto-Arming | 23 | Zone Expansion Bus Module Supervision..... | 38 |
| Auto-Arming Options (Not to be used with UL installations)..... | 24 | Wireless Transmitter Low Battery Supervision..... | 39 |
| One-Touch Arming (Not to be used with UL installations) | 24 | Wireless Transmitter Supervision Options | 39 |
| | | Reprogram All Expansion Modules | 39 |

| | |
|---|-----------|
| Settings for WinLoad Software | 40 |
| Panel Answer Options | 40 |
| Panel Identifier | 40 |
| PC Password | 40 |
| PC Telephone Number | 40 |
| Call WinLoad Software | 40 |
| Answer WinLoad Software | 41 |
| Auto Event Buffer Transmission | 41 |
| Call Back WinLoad | 41 |
| | |
| User Operation..... | 42 |
| Trouble Display | 42 |
| Programming Access Codes | 43 |
| Disarming & Deactivating an Alarm | 43 |
| Regular Arming | 44 |
| Stay Arming | 44 |
| Instant Arming..... | 44 |
| Force Arming (Not to be used with UL Installations) | 44 |
| Manual Bypass Programming..... | 44 |
| One-Touch Arming | 45 |
| Keyswitch Arming | 45 |
| Panic Alarms..... | 45 |
| Auto-Arming (Not to be used with UL installations) | 45 |
| Alarm Memory Display..... | 46 |
| Programming Chime Zones | 46 |
| Keypad Muting (Not to be used with UL installations) | 46 |
| Keypad Backlight (1686H and 1686V only) | 46 |
| | |
| FCC Warnings..... | 47 |
| | |
| Index | 49 |
| | |
| List of Tables | |
| Transformer Requirements Table | 2 |
| Current Consumption Table..... | 4 |
| Decimal and Hexadecimal Programming Table | 7 |
| Zone Recognition Table | 12 |
| Sections and Expansion Inputs | 18 |
| Remote Control Button Programming..... | 21 |
| Button Options | 22 |
| Special Keys for Telephone Numbers | 30 |
| Reporting Formats | 31 |
| Zone Tamper Report Code for Keypad Tamper Supervision Failure.. | 37 |
| Trouble List | 42 |

Part 1: Introduction

1.1 Features



- Up to 15 fully programmable zones
- Two completely independent partitions. Many of the features and options in the Spectra System can be independently set for each partition such as Event Reporting, Entry/Exit Delay, Auto-arming and many more. All zones, the keyswitches and all user codes are assigned to specific partitions, which makes this a true partitioned system.
- Communication bus facilitates the adding, programming and monitoring of all expansion modules
- 1 Installer Code and 48 user codes (including: 1 System Master, 2 Masters, and 1 Duress)
- 2 on-board, fully programmable outputs (PGMs) and one 5A alarm relay
- Simple, direct and logical programming
- Event Call Direction: The Spectra 1759MG control panel events are divided into 5 groups of events. Each of these event groups can be programmed with a separate dialing sequence.
- Two 32-digit monitoring station telephone numbers and one 32-digit Backup Telephone Number
- Contact ID, Pager Format and many more High-Speed Communication Formats
- "False Alarm Prevention" features such as: Intellizone, Auto Zone Shutdown, Beep on Exit Delay, Programmable Delay Before Alarm Transmission, and Recent Closing Report
- Regular arming, Stay arming, Instant arming, Force arming, One-touch arming, Auto-arming, or Keyswitch arming
- 256 Event Buffer with time stamp
- Telephone Line Supervision
- Keypad activated panic alarms
- Compatible with Winload Security System Management Software for Windows®

1.2 Specifications

1.2.1 Spectra 1759MG Control Panel

- AC Power: 16Vac transformer (refer to Table 1 on page 2) with minimum 20VA rating (Rec.: 40VA), 50 to 60Hz
- Battery: 12Vdc, 4Ah/7Ah
- Aux. Power:† 600mA typical, 700mA maximum, fuseless shutdown @ 1.1A
- Bell Output:†† 1A, fuseless shutdown @ 3A
- PGM Outputs: PGM1 = 150mA low-current output, PGM2 = 1A high-current output
- Alarm Relay: One form "C" relay rated @ 125V, 5A receptive load

- Approvals: 433MHz    

868MHz   Compliant to all EU and EFTA countries except Greece according to RTT&E directives.

1.2.2 Spectra Keypads (1686H, 1686V, 1689 and 1641)

- Power input: Typically 9-16Vdc
- 1 standard keypad zone
- On-board anti-tamper switch (optional)

1686H and 1686V 10-Zone LED Keypad

- Current consumption: 62 to 116mA

1689 16-Zone LED Keypad

- Current consumption: 50 to 117mA

1641 32-Character LCD Keypad

- Current consumption: 60 to 80mA
- PGM: 1 with 50mA current limit
- LCD: Super Twisted Nematic display (STN), Wide viewing angle, Backlight & Contrast adjustable

Specifications may change without prior notice

† Cannot exceed 200mA for UL installations

†† Cannot exceed 1A for UL installations

Part 2: Installation

2.1 Location and Mounting

Before mounting the cabinet, push the five white nylon mounting studs into the back of the cabinet. Pull all cables into the cabinet and prepare them for connection before mounting the circuit board into the back of the cabinet. Select a centralized installation site on the main floor that isn't easily accessible to intruders and leave at least 5cm (2in) around the panel box to permit adequate ventilation and heat dissipation. The installation site should be dry and close to an AC source, ground connection and telephone line connection. Avoid installation near or in the path of strong RF fields (i.e. neon lights, computers), on or near metal objects, circuit breaker boxes, air conditioners and heater ducts since they may cause interference and reduce sensitivity. Avoid installing the 1759MG in the basement.



Do not cut, bend or alter the antennae and ensure that electrical wires do not cross over the antennae as these may affect the signal reception.

2.2 Earth Ground

Connect the zone and dialer ground terminals from the control panel to the metallic enclosure and cold water pipe or grounding rod as per local electrical codes.



For maximum lightning protection, use separate earth grounds for the zone and dialer grounds as shown in Figure 2 on page 3. For UL installations, the metallic enclosure must be grounded to the cold water pipe.

2.3 AC Power

Do not use any switch-controlled outlets to power the transformer. Connect the transformer as shown in Figure 1 on page 2. Use Table 1 to determine the required transformer.

Table 1: Transformer Requirements Table

| | | |
|--|---|--|
| Transformer: | Amseco XP-1620 16VAC 20VA <i>(not verified by UL)</i> | UL: Basler Electric BE156240CAA007 16.5VAC 40VA |
| Spectra DC Power Supply rated at: | 1.2A | 1.5A |
| Auxiliary Supply can provide a maximum of: | typ: 600mA, max: 700mA | typ: 600mA, max: 700mA Do not exceed 200mA for UL installations |
| Acceptable Battery Charge Currents | 350mA | 350mA/700mA |

2.4 Backup Battery

To provide power during a power loss, connect a 12Vdc 4Ah rechargeable acid/lead or gel cell backup battery as shown in Figure 1 on page 2. Use a 7Ah battery to comply with UL fire requirements. Connect the backup battery after applying AC power. When installing, verify proper polarity as reversed connections will blow the battery fuse. Also, refer to *Battery Charge Current* on page 36.

2.4.1 Battery Test

If the battery is disconnected or if the battery fuse is blown, a No/Low Battery failure will appear in the keypad's trouble display (see page 42). This trouble will also appear if the battery's capacity is too low or if the voltage drops to 10.5V or lower while the control panel is running on the backup battery. At 8.5V or lower, the panel shuts down and all outputs close.

Figure 1: AC Power and Backup Battery Connections


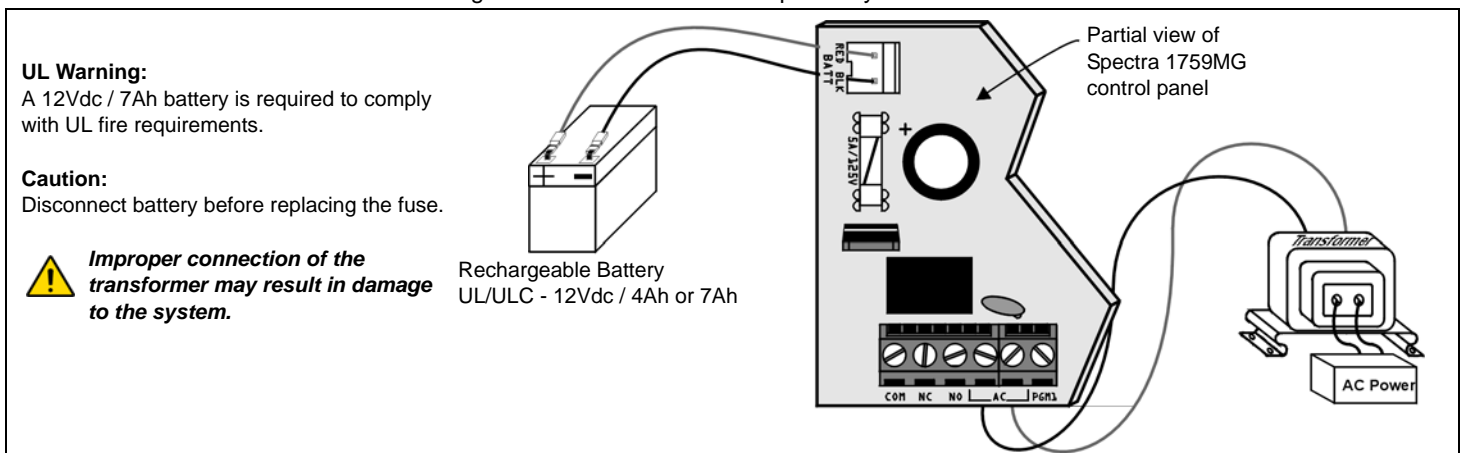


Figure 2: Spectra 1759MG Control Panel Overview

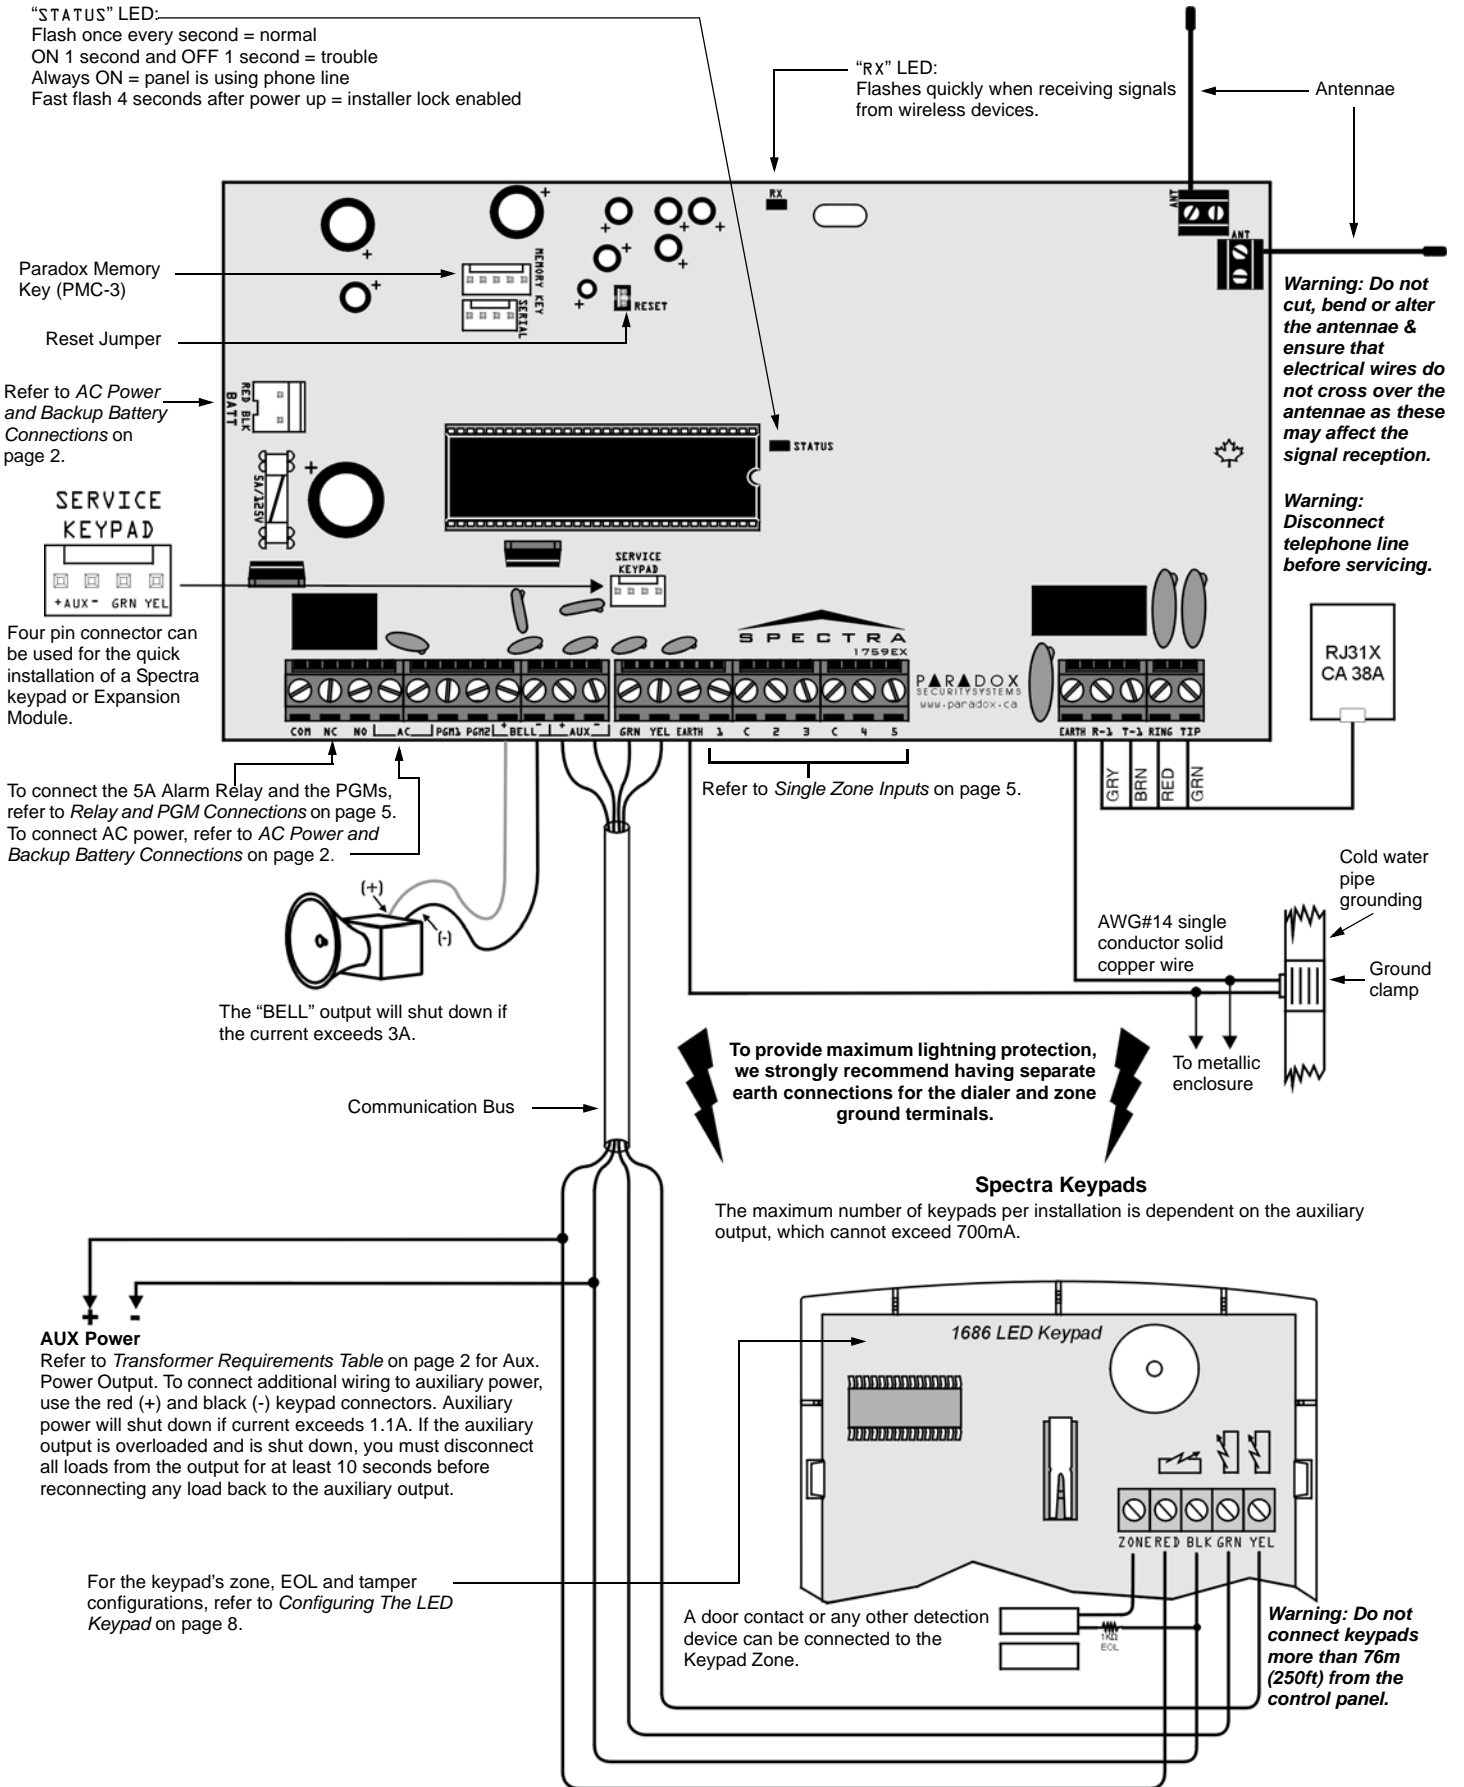

For UL Listed Warnings, refer to **UL AND ULC WARNINGS** on page 48.

2.5 Auxiliary Power Terminals*

The auxiliary power supply terminals can be used to power motion detectors, keypads and other modules or accessories in the security system. A fuseless circuit protects the power supply against current overload and automatically shuts down if the current exceeds 1.1A. If this occurs, the Maximum Auxiliary Current failure will appear in the keypad's trouble display (see page 42). Therefore, the combined current consumption of devices connected to the auxiliary power supply should not exceed 700mA. If the auxiliary output is overloaded and is shut down, you must disconnect all loads from the output for at least 10 seconds before reconnecting any load back to the auxiliary output.



Modules with the APR- prefix are compatible with the Spectra 1759MG and DGP-848. Modules with the APR3- prefix are compatible with the Spectra 1759MG, DGP-848 and DGP-NE96.

Table 2: Current Consumption Table

| Modules | Current Consumption | |
|--|---------------------|---------|
| | Typical | Maximum |
| Spectra 1686H and 1686V 10-Zone LED Keypad | 62mA | 116mA |
| Spectra 1689 16-Zone LED Keypad | 50mA | 117mA |
| Spectra 1641 LCD Keypad | 60mA | 80mA |
| 4-Zone Hardwire Modules (APR3-ZX4/SPC-ZX4) | 12mA | 12mA |
| 8-Zone Hardwire Modules (APR3-ZX8/SPC-ZX8) | 30mA | 30mA |
| 4-PGM Output Module (APR3-PGM4) | 13mA | 150mA |
| Printer Module (APR3-PRT1) | 22mA | 40mA |
| InTouch Voice-Assisted Arm/Disarm Module (APR3-ADM2) | 70mA | 105mA |
| Motion Detectors (see detector instructions for details) | 10 to 50mA | |

2.6 Telephone Line Connection

In order to report system events to the monitoring station, you must connect the incoming telephone company wires into the TIP and RING connections of the control panel and then run the wires from T1 and R1 to the telephone or telephone system as shown in Figure 2 on page 3.

2.7 Bell Output Connection

The BELL+ and BELL- terminals power bells, sirens and other warning devices requiring a steady voltage output during an alarm. The bell output supplies 12Vdc upon alarm and can support one 30-watt or two 20-watt sirens. The bell output uses a fuseless circuit and will automatically shut down if the current exceeds 3A. When this occurs the Maximum Bell Current failure will only appear in the keypad's trouble display (see page 42) during an alarm. If the load on the BELL terminals returns to normal, the control panel will re-instate power to the BELL terminals during the next alarm. When connecting sirens, please verify correct polarity. Connect the positive lead to the BELL+ terminal and the negative lead to the BELL- terminal of the control panel as shown in Figure 2 on page 3.



If the BELL output is not being used, the Bell Disconnected failure will remain in the keypad's trouble display (see page 42). To avoid this connect a 1K Ω resistor across the BELL terminals.

2.8 Programmable Output Connections*

When a specific event occurs in the system, a PGM can reset smoke detectors, activate strobe lights, open/close garage doors and much more.

2.8.1 Alarm Relay and PGMs


The Spectra 1759MG control panel includes two on-board programmable outputs (PGMs). For details on how to program the PGM, refer to *PGM Programming* on page 34. PGM1 can support up to 150mA while PGM2 supports up to 1A (see Figure 3 on page 5) and can be used as a strobe output (see page 35). The PGMs are limited by the power source being used. If powered by:

- **The AUX terminals.** The current consumption of the AUX terminals cannot exceed 700mA. Therefore, whatever devices are connected to the AUX terminals (i.e. modules and PGMs) cannot exceed 700mA combined. For example, if there are six modules connected to the AUX terminals that are using 600mA and you wish to power the PGM using the AUX terminals, the PGM's current consumption cannot exceed 100mA.
- **An external power supply.** If using an external power supply, the current consumption cannot exceed 150mA for PGM1 and 1A for PGM2. If the external power supply's current consumption limit is less than that of the PGM it is connected to, than the current consumption will not exceed the power supply's current limit.

The Spectra 1759MG control panel also has a 5A relay. This relay can be connected as shown in Figure 3 on page 5. The Alarm Relay can be programmed to follow the bell output or the activation and deactivation of the Global PGM (see *Alarm Relay Options* on page 35).

* UL Note: The AUX and PGM terminals cannot exceed 200mA for UL installations.


Figure 3: Relay and PGM Connections

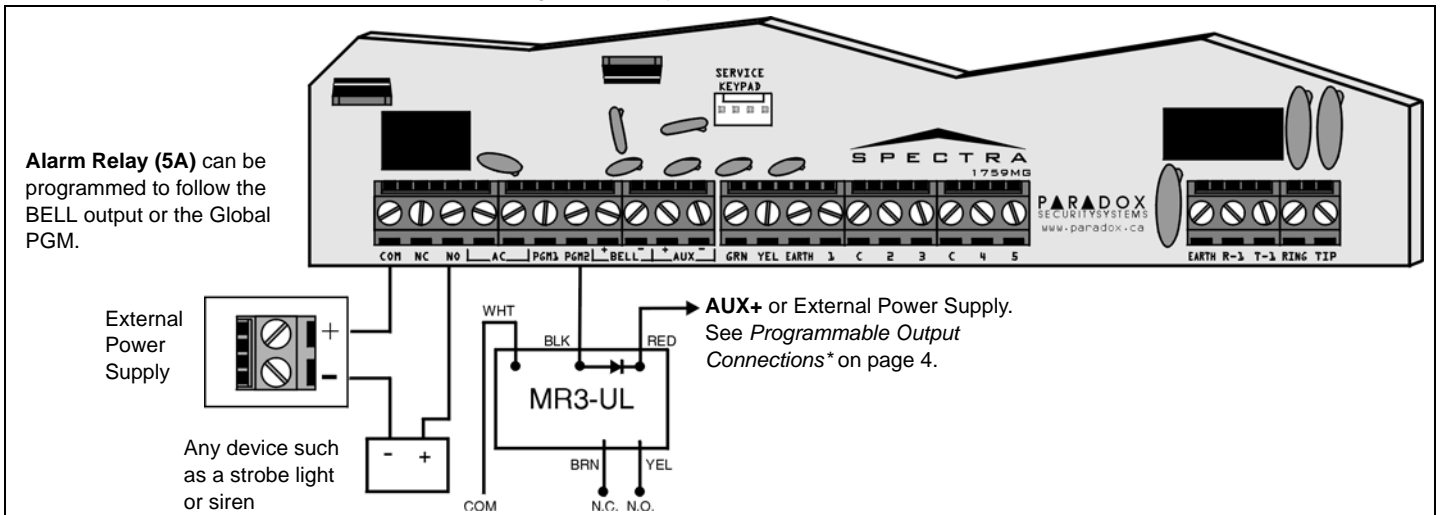

2.9 Single Zone Inputs

Detection devices such as motion detectors and door contacts are connected to the control panel's zone input terminals. Figure 4 demonstrates single zone input terminal connections recognized by Spectra. Once connected, the associated zone's parameters must be defined. For details refer to *Zone Programming* on page 12.

Figure 4: Single Zone Input Connections

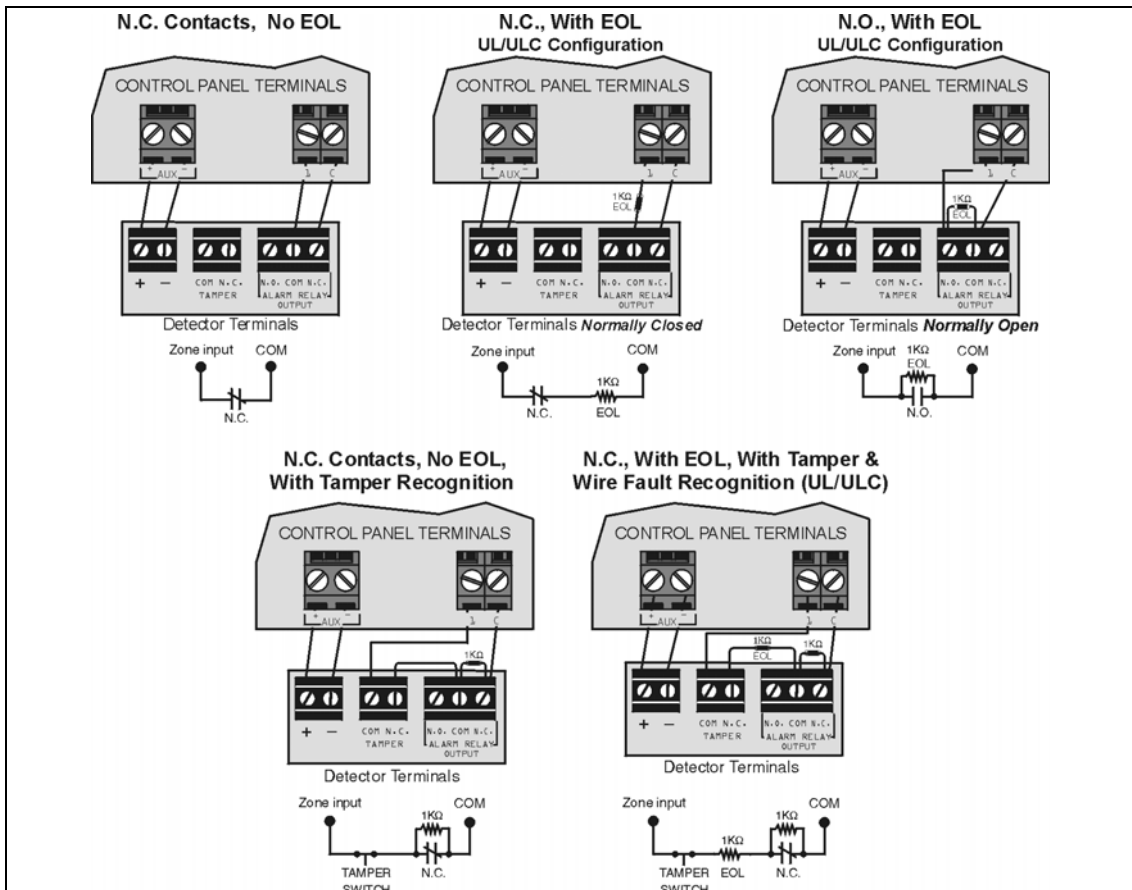

2.10 Keypad and Keypad Zone Connections

To connect the keypads to the control panel, remove the back cover and wire the GRN, YEL, RED, and BLK terminals of each keypad to the corresponding terminals on the control panel as shown in Figure 2 on page 3. There is no limit to the number of keypads that can be connected to the control panel as long as the current consumption does not surpass 700mA*. See *Keypad Tamper Supervision* on page 37.


Each keypad has one zone input terminal, allowing you to connect one motion detector or door contact directly to a keypad. The

* UL Note: Cannot exceed 200mA for UL installations.

keypad can then communicate the status of the zone to the control panel. A maximum of two keypad zones can be used with each control panel. After connecting the device, the zone's parameters must be defined. For details on zone recognition and *Zone Programming* on page 12. Also, refer to the feature *Reassign Keypad Zone 2* on page 12.

Example: A door contact located at the entry point of an establishment can be wired directly to the input terminal of the entry point keypad instead of wiring the door contact all the way to the control panel.

Figure 5: Keypad Zone Connections

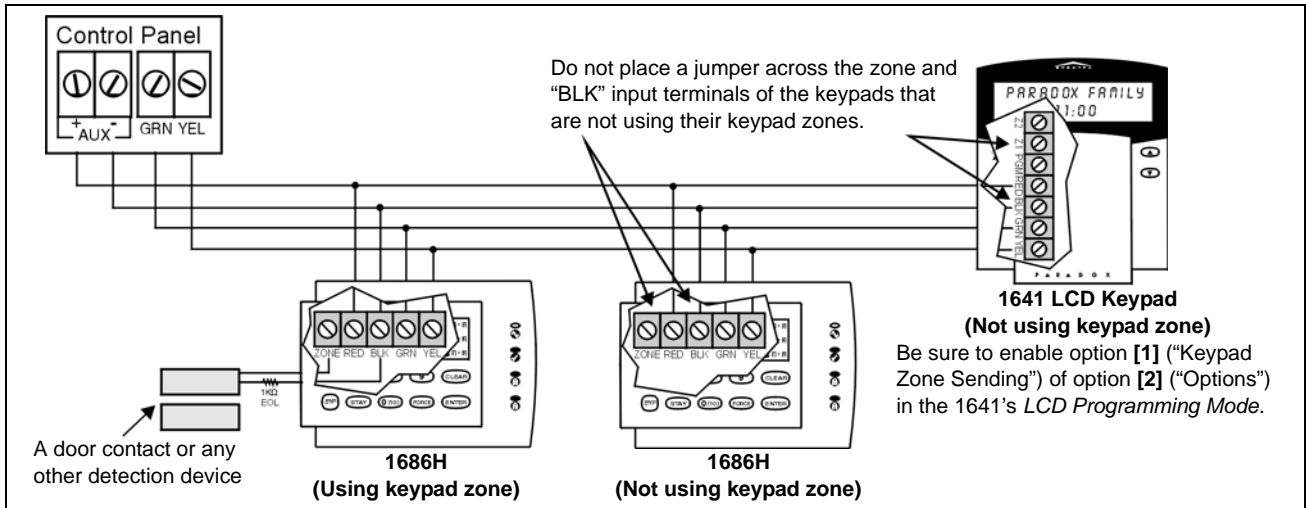


When a 1641 LCD keypad is connected to the 1759MG, the Keypad Zone Sending option (Option [2] key [1]) determines whether the status of the keypad zone will be transmitted to the control panel. The Keypad Zone Sending option of the 1641 keypad must be enabled during the following conditions:

- If you are using both keypad zones and at least one is from a 1641 keypad.
- If you are using the keypad zones of other types of keypads, such as a 1686H 10-zone LED keypad, and the keypad zone definition of the 1641 keypad (keypad zone 1 or keypad zone 2; Option [2] key [3]) matches that of another connected keypad.

2.11 Keyswitch Connections

Keyswitches allow users to arm or disarm a partition by pushing a button or by activating a switch with a key. Connect the keyswitch (as shown in Figure 6) directly to the control panel terminals. Once a keyswitch is connected, it must be assigned to a zone and its parameters must be programmed (see *Zone Programming* on page 12 and *Keyswitch Options* on page 17).


Figure 6: Keyswitch

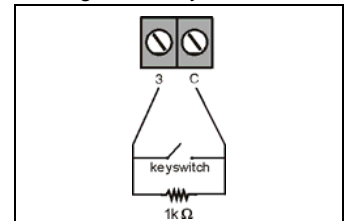

2.12 Fire Circuits

When a zone is programmed as a fire zone, the zone becomes normally open and requires an EOL resistor. If a line short occurs or if the smoke detector becomes active, whether the system is armed or disarmed, the control panel will generate an alarm. If a trouble occurs on a fire zone, the Fire Loop Trouble will appear in the keypad's trouble display (see page 42) and the control panel can transmit the Fire Loop Trouble report, if programmed, in section [206].

Figure 7: Fire Zones

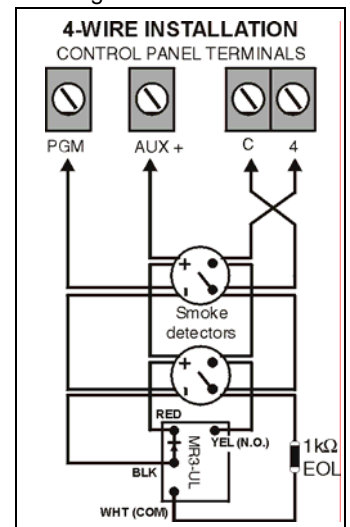

2.12.1 4-Wire Installation:

Any on-board zone can be defined as a fire zone (see page 13) when using the 4-wire installation. Connect the smoke detectors (as shown in Figure 7) directly to the control panel terminals. Program the PGM with the "[PG]/[FNC1] Key was Pressed" Activation Event (see page 34) so the smoke detectors can be reset by pressing the [PG] or [FNC1] key. Pressing the [PG] or [FNC1] key will interrupt power to the smoke detectors for 4 seconds (see *PGM Delay* on page 35).



It is recommended that all smoke detectors be connected using a daisy chain configuration.

Part 3: Programming Methods

3.1 WinLoad Software for Windows*

Program the Spectra Series control panels remotely or on-site using the Winload Software for Windows®. For more information, contact your local Paradox Distributor or visit our web site at www.paradox.ca. If you are using the WinLoad software, you must program the features explained on pages 40 and 41.

* Not investigated by UL.

3.2 Programming Using a Keypad

Use the supplied *Spectra 1759MG Programming Guide* to keep track of which sections were programmed and how. We recommend you read this entire manual before you begin programming.

How Do I Enter Programming Mode?

- 1) Press [ENTER]
- 2) Enter your [INSTALLER CODE] (default: 0000 / 000000)
- 3) Enter 3-digit [SECTION] you wish to program
- 4) Enter required [DATA]

3.2.1 Single Digit Data Entry Method (Hexadecimal and Decimal)

Single Digit Data Entry is used in all sections except those specified in the Feature Select Programming Method (below). After entering Programming Mode as described in the shaded box above, some sections will require that you enter **Decimal** values from **000 to 255**. Other sections will require that you enter **Hexadecimal** values from **0 to F**. The required data will be clearly indicated in this manual as well as in the *Spectra 1759MG Programming Guide*. When entering the final digit in a section, the control panel will automatically save and advance to the next section. Except sections 001 to 016, after entering the first two digits the control panel will switch to Feature Select Programming.

Table 3: Decimal and Hexadecimal Programming Table

| Value or Action | What Do I Press? | What Do I See? | | |
|---------------------|------------------|-------------------------------------|------------------------|---------------|
| | | 10-Zone LED | 16-Zone LED | LCD |
| Values 1 to 9 | [1] to [9] | [1] to [9] | [1] to [9] | [1] to [9] |
| A (hexa only) | [0] | [0 (10)] | [10] | 0 |
| B (hexa only) | [STAY] | [STAY] | [11] | B |
| C (hexa only) | [BYP] | [BYP] | [12] | C |
| D (hexa only) | [MEM] | [MEM] | [13] | D |
| E (hexa only) | [TBL] / [TRBL] | [TBL] | [14] | E |
| F (hexa only) | [PG] / [FNC1] | [PG] | [15] | F |
| Exit Without Saving | [CLEAR] | [ENTER] flashes | [ARM1] & [STAY1] flash | "SECTION []" |
| Insert Blank Digit | [FORCE] | Displays next digit or next section | | |
| Save Data | [ENTER] | Advances to the next section | | |

3.2.2 Feature Select Programming Method

After entering sections [001] to [016], [126] to [138], and [302] to [348], each option from [1] to [8] represents a specific feature or option. Press the key corresponding to the desired option and the corresponding light will illuminate or the option number will appear in the LCD display. This means the option is on. Press the key again to extinguish the corresponding light or remove the digit from the LCD display, thereby, turning off the option. Press the [FORCE] key to set all 8 options to off. Press the keys until the current section's options are set. When the options are set, press the [ENTER] key to save and advance to the next section.

3.2.3 Data Display Mode (LED Keypads Only)

In the Data Display Mode you can view the programmed contents of each section one digit at a time. After entering the desired 3-digit section (see step 3 of the shaded box on page 7), press the [ENTER] key to access the Data Display Mode (will not function with sections using Multiple Feature Select Programming).

Figure 8: Data Display Mode (LED Keypads Only)

To access the Data Display Mode, press the **[ENTER]** key after entering a section and before entering any data. The three LEDs as indicated below will begin to flash indicating that you are in the Data Display Mode.

Each time the **[ENTER]** key is pressed, the keypad will display the next digit in the current section and will continue through all the following sections one digit at a time without changing the programmed values. Not available for sections using the Multiple Feature Select Method. Press the **[CLEAR]** key at any time to exit the Data Display Mode.

3.3 Configuring The LED Keypad

Depending on the version of the keypad, two methods can be used to configure the LED keypad (1686H, 1686V and 1689):

3.3.1 Configuring the 1686H, 1686V and 1689 Keypad V2.0 or higher

The keypad's zone number, EOL definition and anti-tamper switch are programmed through the control panel's programming mode. To do so:

How Do I Configure The Keypad?

- 1) Press **[ENTER]**.
- 2) Enter your **[INSTALLER CODE]** (default: 0000 / 000000).
- 3) Press the **[PG]** (1686H/V) / **[FNC1]** (1689) key and hold it for 3 seconds.
- 4) Press the desired key (**[1]** to **[3]**). See below).
- 5) Press **[ENTER]** to exit programming mode.



PLEASE NOTE: After two minutes, the keypad exits programming mode.

Key [1] - Keypad Zone Selection

Key **[1]** determines whether the keypad's zone is Keypad Zone 1 or Keypad Zone 2. When key **[1]** is OFF (not illuminated), the keypad's zone is Keypad Zone 1. When key **[1]** is ON (illuminated), the keypad's zone is Keypad Zone 2. Refer to the Table 4 on page 12 for more information.

Key **[1]** OFF - Keypad Zone 1 (default)

Key **[1]** ON - Keypad Zone 2

Key [2] - EOL Definition

Key **[2]** determines the keypad zone's EOL definition. When key **[2]** is OFF (not illuminated), EOL is disabled and the keypad zone will use the on-board EOL resistor. When key **[2]** is ON (illuminated), EOL is enabled and the keypad zone requires that an external EOL resistor be connected (refer to *Spectra 1759MG Control Panel Overview* on page 3 for more details).

Key **[2]** OFF - EOL disabled

Key **[2]** ON - EOL enabled (default)

Key [3] - On-Board Anti-Tamper

Key **[3]** enables or disables the keypad's on-board anti-tamper switch. When key **[3]** is OFF (not illuminated), the anti-tamper switch is disabled. When key **[3]** is ON (illuminated), the anti-tamper switch is enabled.

Key **[3]** OFF - On-board anti-tamper switch disabled

Key **[3]** ON - On-board anti-tamper switch enabled




NOTE: The keypad can be ordered with or without an anti-tamper switch. If the keypad has no anti-tamper switch, key [3] will be OFF by default. If the keypad has an anti-tamper switch, key [3] will be ON by default.

3.4 Programming Using A Paradox Memory Key*

Copy the sections of one Spectra control panel into the Paradox Memory Key (PMC-3). Then copy the contents of the Memory Key into as many Spectra control panels as needed. Each panel is programmed in less than 3 seconds.

Download to DESTINATION Control Panel

- 1) Remove AC and battery power from the control panel.
- 2) Place the Memory Key on the serial connector labeled KEY of the Spectra Control Panel that is to receive the contents of the Memory Key.
- 3) Reapply AC and battery power.
- 4) In Installer Programming Mode, enter section **[900]**, then press **[ENTER]** to acknowledge.
- 5) When the keypad emits a confirmation beep, remove the Memory Key.
- 6) Enter section **[750]** to reprogram the modules with the information downloaded from the Paradox Memory Key.

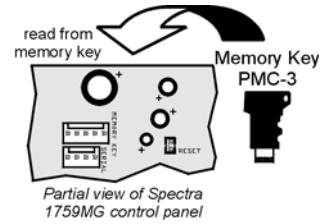

Copy to Memory Key from SOURCE Control Panel

- 1) Remove AC and battery power from the control panel.
- 2) Place Memory Key on the serial connector labeled KEY of the Spectra Control Panel that you want to copy. Make sure the write protect jumper of the Memory Key is on.
- 3) Reapply AC and battery power.
- 4) In Installer Programming Mode, enter section **[902]**, then press **[ENTER]** to acknowledge.
- 5) When the keypad emits a confirmation beep, remove the Memory Key. Remove the Memory Key's jumper if you do not wish to accidentally overwrite its contents.


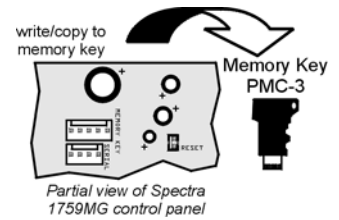


Figure 9: Paradox Memory Key

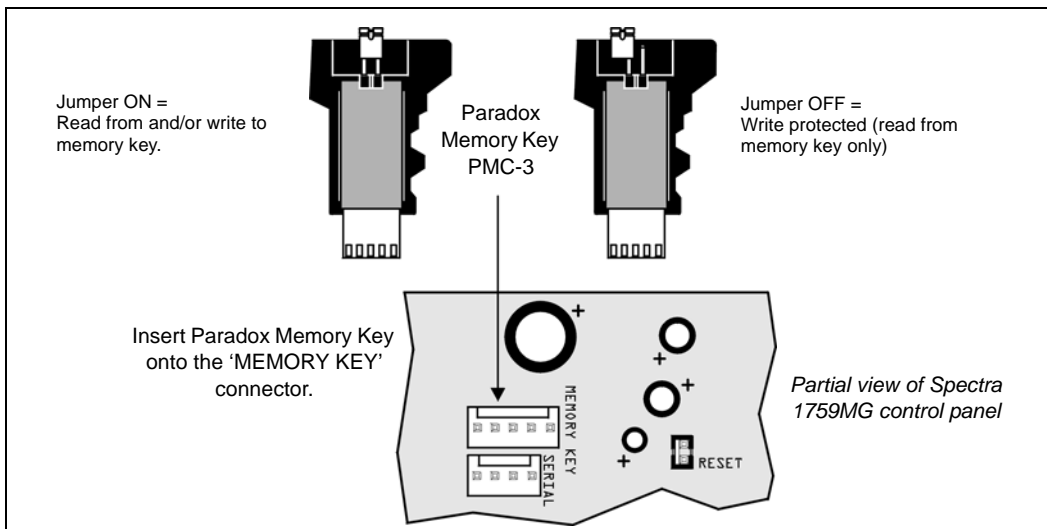

* Not investigated by UL

Part 4: Access Codes

The Spectra 1759MG control panel supports the following access codes:

| | |
|-----------------------------|---|
| Installer Code: | Used to program all control panel settings except user access codes. |
| System Master Code (001): | Provides full access. Arm and disarm using any method described in the <i>User Code Options</i> on page 10 as well as program the user access codes. |
| Master Code 1 (002): | Permanently assigned to partition 1. Same as a regular user code except it can also program access codes for user codes assigned to partition 1. |
| Master Code 2 (003): | Permanently assigned to partition 2. Same as a regular user code except it can program access codes for user codes assigned to partition 2. If the system is not partitioned Master Code 002 will be assigned to partition 1. |
| 45 User Codes (004 to 048): | Can arm and disarm as per <i>User Code Options</i> on page 10. |

4.1 Access Code Length

Section [127]: System Options

Option [2] OFF = 6-Digit Access Codes

Option [2] ON = 4-Digit Access Codes (default)

All access codes can be set to lengths of either 4- or 6-digits. When the 4-digit option is selected, entering a 4-digit code will allow access. Using the 6-digit option, entering 6 digits is required to allow access.



If the access code length is changed from four digits to six digits when access codes have already been programmed, the control panel will automatically add the last 2 digits by using the first 2 digits. For example, if the access code is 1234 and you switch to 6 digits, the code will become 123412. Be sure to verify the access codes after switching from 4-digit access codes to 6-digit codes. When switching from six digits to four digits, the control panel will simply remove the final two digits of the access code. For example, 123456 will become 1234.

4.2 Installer Code (Default: 0000 / 000000)

The Installer Code is used to enter the 1759MG's programming mode (see page 7), which allows you to program all the features, options and commands of the control panel. The Installer Code can be 4- or 6-digits in length (see *Access Code Length* on page 10) where each digit can be any value from 0 to 9. The Installer Code cannot be used to program Master Code 1, Master Code 2 or user access codes. To program the Installer Code press:

[ENTER] + [CURRENT INSTALLER CODE] + [281] + new 4- or 6-digit Installer Code

4.3 System Master Code (Default: 1234 / 123456)

The Installer Code can be used to program the System Master Code. With the System Master Code a user can use any arming method and can program any user access code, but not the User Code Options. The System Master Code can be 4 or 6 digits in length *Access Code Length* on page 10, where each digit can be any digit from 0 to 9. To change the System Master Code press:

[ENTER] + [INSTALLER CODE] + [301] + new 4- or 6-digit System Master Code

4.4 User Code Options

Sections [302] to [348]: Options [1] to [7]

The User Code Options define which arming methods each user can use to arm or disarm the system. Regardless of these settings, all users can Regular arm assigned partitions and all users except those with the Arm Only option can disarm an assigned partition, regardless of how it is armed. Select one or more of the options described on the following pages for each user access code, where sections [302] to [348] represent user access codes 002 to 048. For more information please refer to *Programming Access Codes* on page 43.

4.4.1 Partition 1 Assignment

Sections [302] to [348]: User codes 002 to 048

Option [1] OFF = Deny access to partition 1

Option [1] ON = User code has access to partition 1 (default)

If the system is partitioned (see page 36), user codes with this option enabled can arm and disarm partition 1.



If the system is not partitioned, you must assign partition 1 to the user access code. Otherwise, the user access code will be considered disabled.

4.4.2 Partition 2 Assignment

Sections [302] to [348]: User Codes 002 to 048
Option [2] OFF = Deny access to partition 2 (default)
Option [2] ON = User code has access to partition 2

If the system is partitioned (see *Partitioning* on page 36), user codes with this option enabled can arm and disarm partition 2. If the system is not partitioned, the control panel ignores this option.

4.4.3 Bypass Programming

Sections [302] to [348]: User Codes 002 to 048
Option [3] OFF = Bypass Programming Disabled
Option [3] ON = Bypass Programming Enabled (default)

User codes with this option enabled can perform Bypass Programming in assigned partitions.

4.4.4 Stay Arming

Sections [302] to [348]: User Codes 002 to 048
Option [4] OFF = Stay Arming Disabled
Option [4] ON = Stay Arming Enabled for selected User Code (default)

User codes with this option enabled can Stay arm assigned partitions.

4.4.5 Force Arming

Sections [302] to [348]: User Codes 002 to 048
Option [5] OFF = Force Arming Disabled (default)
Option [5] ON = Force Arming Enabled for selected User Code

User codes with this option enabled can Force arm assigned partitions.

4.4.6 Arm Only

Sections [302] to [348]: User Codes 002 to 048
Option [6] OFF = Arm Only Disabled (default)
Option [6] ON = Arm Only Enabled for selected User Code

The user code with this option enabled can arm assigned partitions, but cannot disarm any partitions. The type of arming is dependent on the other User Code Options selected. Please note that with the Arm Only option, the user can cancel a recently armed system by re-entering the access code before the end of the exit delay.

4.4.7 PGM Activation

Sections [302] to [348]: User Codes 002 to 048
Option [7] OFF = User Code follows User Code Options and can activate a PGM (default)
Option [7] ON = User Code can activate a PGM only

With option [7] off, entering the access code will arm or disarm according to the programmed User Code Options as well as activate or deactivate a PGM. The appropriate PGM Activation/Deactivation Event must also be programmed (see *Programmable Outputs* on page 34). With option [7] on, the control panel will ignore all other User Code Options. Therefore, entering the access code will only activate or deactivate the PGM.

4.5 Lock Master Code

Section [127]: System Options
Option [4] OFF = Lock System Master Code Disabled (default)
Option [4] ON = Lock System Master Code Enabled

With this feature enabled, the control panel will lock the System Master Code (001). This means that the System Master Code cannot be deleted, but it can be changed.

4.6 Duress Code

Section [127] = System Options
Option [6] OFF = Duress Code Disabled (default)
Option [6] ON = User Code 048 becomes a Duress code

With this feature enabled, User Code 048 becomes a Duress Code. When forced to arm or disarm their system, users can enter a Duress Code (User Code 048) to arm or disarm the system which can immediately transmit a silent alert to the monitoring station, transmitting the duress report code programmed in section [196].

Part 5: Zone Programming

When programming zones, the zone assignments are dependent on where the detection devices are connected to in the system (see Table 4). In installations that require using mostly the expansion inputs (see section 5.1), refer to *Reassign Keypad Zone 2* on page 12 and *Reassign Zones to Expansion Inputs* on page 13.

Table 4: Zone Recognition Table

| | Option [7]: OFF Option [8]: OFF | Option [7]: ON Option [8]: OFF | Option [7]: OFF Option [8]: ON | Option [7]: ON Option [8]: ON |
|----------------------|------------------------------------|-----------------------------------|-----------------------------------|----------------------------------|
| Control Panel | | | | |
| Input 1 = | Zone 1 | Zone 1 | Zone 1 | Zone 1 |
| Input 2 = | Zone 2 | Zone 2 | Zone 2 | Zone 2 |
| Input 3 = | Zone 3 | Zone 3 | N/A | N/A |
| Input 4 = | Zone 4 | Zone 4 | N/A | N/A |
| Input 5 = | Zone 5 | Zone 5 | N/A | N/A |
| Keypad | | | | |
| Zone 1 = | Zone 6 | Zone 6 | Zone 3 | Zone 3 |
| Zone 2 = | Zone 7 | N/A | Zone 4 | N/A |
| Expansion | | | | |
| Input 1 = | Zone 8 | Zone 7 | Zone 5 | Zone 4 |
| Input 2 = | Zone 9 | Zone 8 | Zone 6 | Zone 5 |
| Input 3 = | Zone 10 | Zone 9 | Zone 7 | Zone 6 |
| Input 4 = | Zone 11 | Zone 10 | Zone 8 | Zone 7 |
| Input 5 = | Zone 12 | Zone 11 | Zone 9 | Zone 8 |
| Input 6 = | Zone 13 | Zone 12 | Zone 10 | Zone 9 |
| Input 7 = | Zone 14 | Zone 13 | Zone 11 | Zone 10 |
| Input 8 = | Zone 15 | Zone 14 | Zone 12 | Zone 11 |

 = not displayed on 10-Zone LED Keypads

Option [7] = Reassign Keypad Zone 2

Option [8] = Reassign Zones to Expansion Inputs

5.1 What is an Expansion Input?

An expansion input allows you to connect modules to the system to increase the number of zones available up to 15 zones. Each hardwired input on a zone expansion bus module or wireless transmitter can be assigned to an expansion input. The expansion inputs can be used in any combination. For example, 5 wireless transmitters and 3 hardwire inputs can be assigned to the expansion inputs. Spectra control panels cannot support more than eight expansion inputs. Refer to the appropriate module's Instruction Sheet for details.



Do not assign inputs from different modules to the same expansion input.

5.2 Reassign Keypad Zone 2

Section [126]: General Options

Option [7] OFF = Reassign Keypad Zone 2 Disabled (default)

Option [7] ON = Reassign Keypad Zone 2 Enabled

In installations that require using mostly the expansion inputs, such as using wireless zones, 10-Zone LED keypads may be unable to display some of the zones. The Reassign Keypad Zone 2 feature changes the zone numbering to increase the number of expansion inputs that are displayed on 10-Zone LED keypads. Combine with the Reassign Zones to Expansion Inputs feature (see page 13) to increase the number of displayable expansion inputs. See Table 4 for Zone Recognition.



When Reassign Keypad Zone 2 is enabled, the Keypad Tamper Supervision (see page 37) for Keypad Zone 2 is lost. Keypad Tamper Supervision will ONLY function on Keypad Zone 1.

5.3 Reassign Zones to Expansion Inputs

Section [126]: General Options

Option [8] OFF = Reassign Zones to Expansion Inputs Disabled (default)

Option [8] ON = Reassign Zones to Expansion Inputs Enabled

In installations that require using mostly the expansion inputs, such as using wireless zones, 10-Zone LED keypads may be unable to display some of the zones. The Reassign Zones to Expansion Inputs feature changes the zone numbering to increase the number of expansion inputs that are displayed on 10-Zone LED keypads. Combine with the Reassign Keypad Zone 2 feature (refer to *Reassign Keypad Zone 2* on page 12) to increase the number of displayable expansion inputs. See Table 4 on page 12 for the Zone Recognition.

5.4 Zone Programming

After connecting a hardwired detection device to one of the control panel's or zone expansion bus module's input terminals or after setting up any wireless transmitters, define the associated zone's parameters. The zone parameters define the type of zone, the zone's partition assignment and how the control panel will react when an alarm condition occurs on that zone. These zone parameters are programmed into one section as detailed in Figure 10 on page 13.




See Table 4 on page 12 for the Zone Number Recognition.



Only the control panel's on-board inputs can be defined as a fire, delayed fire or a keyswitch zone. The on-board zones are zones 01 to 05.

Figure 10: Spectra Zone Programming

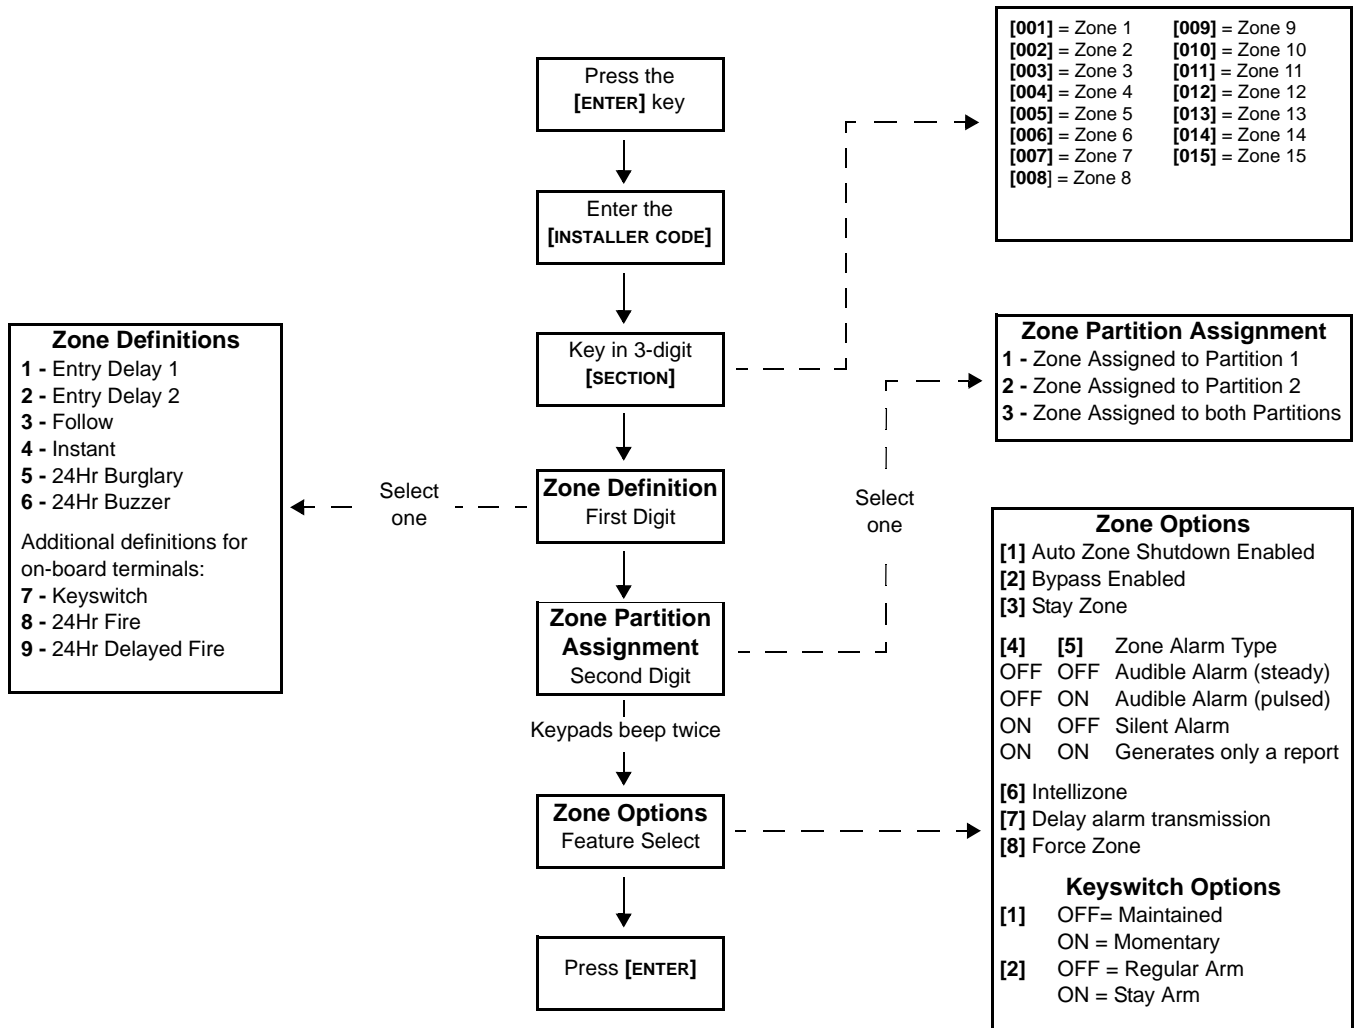

5.5 Zone Definitions

As demonstrated in Figure 10, sections [001] to [015] represent zones 1 through 15 respectively, where the first digit in each of these sections represents the zone's definition. Also, refer to *Zone Speed* on page 17. To disable a zone, clear the contents of the section corresponding to the desired zone by pressing the [FORCE] key 3 times and pressing [ENTER]. There are 9 available Zone Definitions, which are described as follows.

5.5.1 Entry Delay 1

Sections **[001]** to **[015]**: Zones 1 to 15, First Digit = **1**

When the system is armed and a zone defined with Entry Delay 1 opens, the control panel will generate an alarm after the programmed Entry Delay 1 Timer elapses. This is to provide users with enough time to enter the protected area and disarm the system. To program the Entry Delay 1 Timer, key in the desired 3-digit delay value (000 to 255 seconds, Default = 45 seconds) into section **[069]**. Entry delay zones are commonly used at the entry/exit points of the protected area (i.e. front/back door, garage, etc.). Using different entry delays (see *Entry Delay 2* on page 14) is useful when, for example, one entry point requires a longer delay than the other entry point or in a partitioned system where each partition may require a different entry delay.

5.5.2 Entry Delay 2

Sections **[001]** to **[015]**: Zones 1 to 15, First Digit = **2**

Entry Delay 2 zones are identical to the Entry Delay 1 zones (see section 5.5.1), except it uses a separate entry delay timer. To program the Entry Delay 2 Timer, key in the desired 3-digit delay value (000 to 255 seconds, Default = 45 seconds) into section **[070]**.



This timer is also used as the Stay Delay timer (see *Stay Arming with Delay* on page 22).

5.5.3 Follow Zones

Sections **[001]** to **[015]**: Zones 1 to 15, First Digit = **3**

When an armed Follow Zone opens, the control panel will immediately generate an alarm, unless an entry delay zone opens first:

- If an armed Follow Zone opens after an entry delay zone opens, the control panel waits until the entry delay timer has elapsed before generating an alarm.
- If an armed Follow Zone opens after more than one entry delay zone opens, the control panel will wait until the entry delay timer of the zone that opened first has elapsed.

This feature is commonly used when a motion detector is protecting the area occupied by the entry point keypad. This will prevent the motion detector from causing an alarm when a user enters through the entry point to disarm the system.

5.5.4 Instant Zones

Sections **[001]** to **[015]**: Zones 1 to 15, First Digit = **4**

When an armed Instant Zone opens, the control panel immediately generates an alarm. Instant Zones are commonly used for windows, patio doors, skylights and other perimeter type zones.

5.5.5 24Hr Burglary Zones

Sections **[001]** to **[015]**: Zones 1 to 15, First Digit = **5**

Whenever a 24Hr Burglary Zone opens, whether the system is armed or disarmed, the control panel will immediately generate an alarm.

5.5.6 24Hr Buzzer

Sections **[001]** to **[015]**: Zones 1 to 15, First Digit = **6**

Whenever a 24Hr Buzzer Zone opens, whether the zone is armed or disarmed, the control panel sets off the keypad's buzzers to indicate that the zone was breached. The control panel will report the alarm, but will not enable the bell/siren output. Enter any valid access code on the keypad to stop the buzzer. This zone definition is particularly useful when a user wishes to be notified when something such as a safe or locker within the home has been accessed (i.e. a child accessing a valuable collection).

5.6 Exclusive Zone Definitions

The following three zone definitions can only be used for devices connected directly to the control panel's on-board input terminals. When a zone is programmed as a keyswitch zone, the control panel will ignore all other Zone Options. When a zone is programmed as a standard fire zone or delayed fire zone, the control panel will ignore the Zone Options that may have been programmed, except Auto Zone Shutdown. Wireless devices and devices connected to the zone expansion bus modules cannot be programmed with these definitions.

5.6.1 Keyswitch Zone

Sections **[001]** to **[005]**: Zones 1 to 5, First Digit = **7**

Connecting a keyswitch to a zone allows users to arm the system by pressing a button or by turning a switch on or off with a key. Please refer to *Keyswitch Connections* on page 6 and *Keyswitch Options* on page 17.

5.6.2 Standard 24Hr Fire Zone

Sections [001] to [005]: Zones 1 to 5, First Digit = 8

Whenever a Standard 24Hr Fire Zone opens, whether it is armed or disarmed, the control panel will generate the following:

- The control panel can send the corresponding Alarm report code from sections [187] to [190].
- If a tamper/wiring fault occurs on a fire zone, the control panel can send a Fire Loop Trouble report code programmed in section [206] to the monitoring station. The keypad will display a Fire Loop Trouble in its trouble display (see page 42).
- Alarms are always audible regardless of other settings. Fire alarms generate an intermittent (pulsed) bell/siren output signal as shown in Figure 11 on page 15.

For information on how to connect smoke detectors to the control panel, refer to *Fire Circuits* on page 6.

5.6.3 Delayed Fire Zone

Sections [001] to [005]: Zones 1 to 5, First Digit = 9

When a Delayed 24Hr Fire Zone opens, whether it is armed or disarmed, the control panel will react as shown in Figure 12 on page 15. Delayed 24Hr Fire Zones are commonly used in residential homes where a smoke detector often generates false alarms (i.e. burning bread, etc.).

Figure 11: Bell Output During Fire Alarm


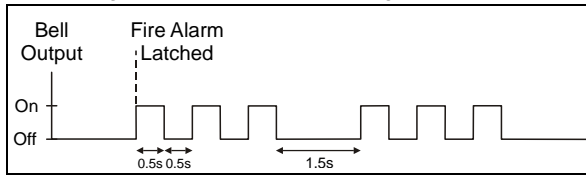


Figure 12: Delayed 24Hr Fire Zone

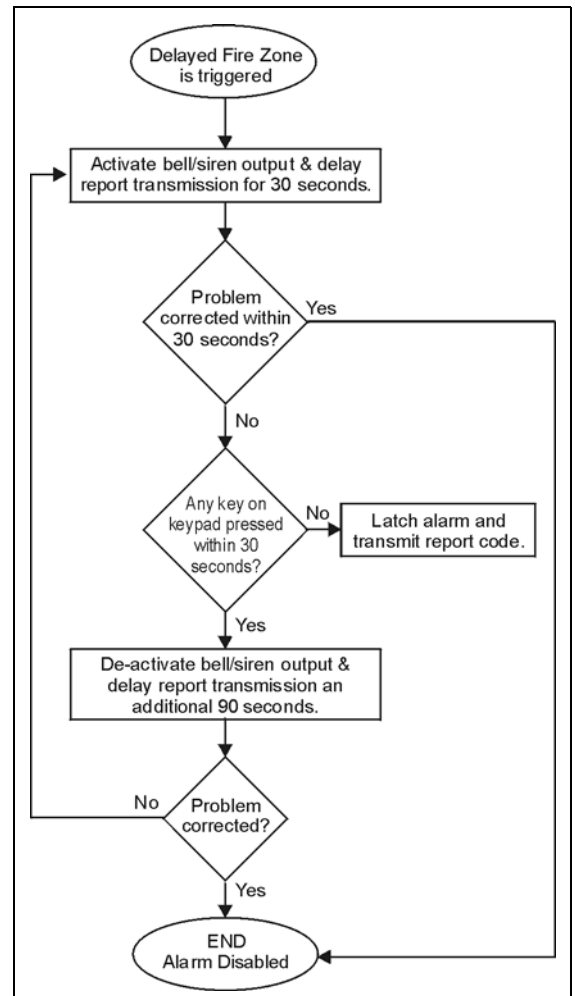

5.7 Programming a Wireless Fire Zone

Fire zones cannot be assigned to expansion zones. As a result, when installing a wireless smoke detector, the corresponding zone must be programmed as follows:

How Do I Program a Wireless Fire Zone?

- 1) Enter [5] in the Zone Definition to define it as a 24Hr Burglary Alarm (see page 14).
- 2) Disable [4] and enable [5] in Zone Options to set the zone's alarm type to a pulsed Audible Alarm (see Figure 10 on page 13).
- 3) Disable [1] and [2] in Zone Options to disable the zone's Auto Zone Shutdown and Bypass Enabled features (see Figure 10 on page 13).
- 4) Change the zone's report code from a Burglary report code (Prog. Value 11) to a Fire report code (Prog. Value 04). If using Ademco Contact I.D., set the Contact ID Options from All Codes to Programmable (section [136] option [3] = OFF) and then enter the report code manually. See *Spectra 1759MG Programming Guide* for more information.

5.8 Zone Partition Assignment

Sections [001] to [015]: Zones 1 to 15

The control panel provides the option of partitioning the security system into two completely independent systems. As demonstrated in Figure 10 on page 13, sections [001] to [015] represent zones 1 through 15 respectively, where the second digit in each of these sections represents the zone's partition assignment. The zone is assigned to Partition 1 if second digit = 1, Partition 2 if second digit = 2, or both partitions is second digit = 3. For more details, refer to *Partitioning* on page 36.

5.9 Zone Options

As demonstrated in Figure 10 on page 13, sections [001] to [015] represent zones 1 through 15 respectively. After entering the first two digits, select one or more of the following Zone Options by using the Multiple Feature Select Programming Method (see page 7):

5.9.1 Auto Zone Shutdown

Sections [001] to [015] = Zones 1 to 15
Option [1] OFF = Auto Zone Shutdown Disabled
Option [1] ON = Auto Zone Shutdown Enabled for selected zone (default)

If, in a single armed period, the number of alarms generated by a zone with the Auto Zone Shutdown option enabled exceeds the number defined by the Auto Zone Shutdown Counter, the control panel will no longer generate an alarm for that zone. To program the Auto Zone Shutdown Counter, key in the desired limit (000=Disabled, 001 to 015, Default = 5) into section [089]. The Auto Zone Shutdown Counter resets every time the partition that is assigned to the corresponding zone is armed.

5.9.2 Bypass Zones

Sections [001] to [015] = Zones 1 to 15
Option [2] OFF = Bypass Zone Disabled
Option [2] ON = Selected Zone is Bypass Enabled (default)

When a user utilizes the Bypass Programming feature (see page 44), only zones with the Bypass option enabled can be programmed as bypassed.



Do not program a fire zone with the Bypass option, as the control panel will never bypass fire zones.

5.9.3 Stay Zones

Sections [001] to [015]: Zones 1 to 15
Option [3] OFF = Stay Zone Disabled (default)
Option [3] ON = Selected Zone is Stay Enabled

Zones with the Stay option enabled will be bypassed when the system is *Stay Armed* (see page 44).



Do not program a fire zone with the Stay option, as the control panel will never bypass fire zones when Stay arming.

5.9.4 Alarm Types

Sections [001] to [015]: Zones 1 to 15
[4] OFF / [5] OFF: *Audible Steady* (default)

When the conditions for an alarm have been met, the control panel can transmit the appropriate Zone Alarm report code (see page 28) and provides a steady output for any bells or sirens connected to the control panel's bell output.

[4] OFF / [5] ON: *Audible Pulsed Alarm*

When the conditions for an alarm have been met, the control panel can transmit the appropriate Zone Alarm report code (see page 28) and provides a pulsed output (see Figure 11 on page 15) for any bells or sirens connected to the control panel's bell output.

[4] ON / [5] OFF: *Silent Alarm*

When the conditions for an alarm are met, the control panel can transmit the appropriate Zone Alarm report code (see page 28) and will not activate the control panel's bell output. The appropriate ARM or STATUS LED on the keypads will flash to indicate an alarm and the user will still have to disarm the system.

[4] ON / [5] ON: *Report Only*

When the conditions for an alarm have been met, the control panel can transmit the appropriate Zone Alarm report code (see page 28). The system will not have to be disarmed.

5.9.5 Intellizone

Sections [001] to [015]: Zones 1 to 15
Option [6] OFF = Intellizone Disabled (default)
Option [6] ON = Intellizone Enabled for Selected Zone

This feature reduces the possibility of false alarms. When a zone with the Intellizone option opens, the panel does not immediately generate an alarm. First it triggers the Intellizone Delay Timer. To program the Intellizone Delay Timer, key in the desired 3-digit value (010 to 255 seconds, Default = 48 seconds) into section [084]. If any of the following conditions occur during this period, the panel will generate an alarm:

- During the Intellizone Delay, a second zone has caused an alarm.
- During the Intellizone Delay, the zone in alarm has restored (closed) and re-occurred (opened).
- The zone in alarm remains open for the entire Intellizone Delay.

5.9.6 Delay Before Alarm Report Code Transmission

Sections [001] to [015]: Zones 1 to 15

Option [7] OFF = Delay Alarm Transmission Disabled (default)

Option [7] ON = Delay Alarm Transmission Enabled for Selected Zone

When an alarm condition occurs on a zone with this option enabled, the control panel enables the bell/siren output, but does not report the alarm to the monitoring station until the end of the Alarm Before Transmission Delay. To program the Alarm Transmission Delay, key in the desired 3-digit delay value (000 = Disabled, 001 to 255 seconds) into section [080]. During this period, disarming the system disables the bell/siren output and cancels the report code transmission. This feature is commonly used with entry delay zones to reduce false alarms created by new users who may not disarm the system in time.

5.9.7 Force Zones

Sections [001] to [015]: Zones 1 to 15

Option [8] OFF = Force Zone Disabled (default)

Option [8] ON = Selected Zone is Force Enabled

Any open Force Zones at the time of arming will be considered deactivated by the control panel (see page 44). If during this period a deactivated zone is closed, the control panel will revert that zone to active status. Consequently, the control panel will generate an alarm if the zone is breached.



Do not program a fire zone with the Force option, as the control panel will never bypass fire zones when Force arming.

5.9.8 Keyswitch Options

Sections [001] to [005]: Option [1] and [2]

When an on-board zone is programmed as a keyswitch zone (see page 14), the control panel will ignore any other Zone Option. The keyswitch can be programmed as a Maintained or Momentary Keyswitch and to Regular or Stay arm (see page 44). A Maintained Keyswitch will arm the system when it is set to the ON position and will disarm when set to the OFF position. To arm with a Momentary Keyswitch, set the keyswitch to the ON position then turn it back to the OFF position. Repeating this sequence will disarm the system. Program the keyswitch with the following:

Option [1] OFF = Maintained (default)

Option [2] OFF = Regular Arming (default)

Option [1] ON = Momentary

Option [2] ON = Stay Arming

5.10 Zone Speed

Sections [050] to [064]: Zones 1 to 15

001 to 255 X 10ms, Default = 600ms

The Zone Speed defines how quickly the control panel will respond to an open zone. The control panel will not display an open zone on the keypad or generate an alarm until the programmed Zone Speed has elapsed. All other zone definitions and options do not come into effect until the Zone Speed has elapsed. This feature prevents any momentary glitches from causing an alarm or unnecessary reporting.

5.11 EOL Zones

Section [132]: Zone Options

Option [4] OFF = Zones do not use EOL resistors (default)

Option [4] ON = Zones require EOL resistors

If all detection devices connected to the control panel have input terminals that require 1K Ω end of line resistors, enable option [4] in section [132]. For details on using EOL resistors, refer to *Single Zone Inputs* on page 5.

Part 6: Wireless Features

The Spectra 1759MG allows for the addition of up to eight fully supervised Magellan wireless transmitters, and up to eight programmable remote controls. To program a wireless fire zone, refer to *Programming a Wireless Fire Zone* on page 15.

6.1 Wireless Transmitter Programming

The programming of the wireless transmitters (detectors and door contacts) is accomplished in two steps:

1. Assign the wireless transmitter to the Spectra 1759MG.
2. Program the zones.

6.1.1 Assigning Wireless Transmitters to the Receiver

Sections [601] to [608]

Sections [601] to [608] represent expansion inputs 1 to 8 respectively. For example, section [601] is assigned to expansion input 1, section [602] is assigned to expansion input 2, etc. (refer to Table 5). Each Expansion Input represents a specific zone in the Spectra 1759MG system (see Table 4 on page 12).

Table 5: Sections and Expansion Inputs

| Section # | 6-digit Serial Number | Expansion Input |
|-----------|-----------------------|-----------------|
| [601] | __/_/_/_/_/_/_ | Input 1 |
| [602] | __/_/_/_/_/_/_ | Input 2 |
| [603] | __/_/_/_/_/_/_ | Input 3 |
| [604] | __/_/_/_/_/_/_ | Input 4 |
| [605] | __/_/_/_/_/_/_ | Input 5 |
| [606] | __/_/_/_/_/_/_ | Input 6 |
| [607] | __/_/_/_/_/_/_ | Input 7 |
| [608] | __/_/_/_/_/_/_ | Input 8 |

How Do I Assign Wireless Transmitters to the Spectra 1759MG?

- 1) Press the [ENTER] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter the desired [SECTION NUMBER] (from sections [601] to [608]).
- 4) Enter the 6-digit [SERIAL NUMBER] of the wireless transmitter.



Do not assign detection devices from different modules to the same expansion input. For example, do not assign a wireless transmitter to section [601] and then connect a detection device to input Z1 of the APR3-ZX8.



The serial number is located on the inside of the transmitter or you can use the Serial Number Display (see page 19) to determine its serial number.

The transmitters must be activated once having been assigned to the Spectra 1759MG. To activate a transmitter, insert the batteries and close the cover. To ensure proper synchronization between the control panel and the transmitter, open and close the zone corresponding to the transmitter.

6.1.2 Deleting Assigned Wireless Transmitters

Sections [601] to [608]

How Do I Delete Assigned Wireless Transmitters?

- 1) Press the [ENTER] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter the desired [SECTION NUMBER] (from sections [601] to [608]).
- 4) Press the [0] key six times to clear the serial number.

6.1.3 Programming the Zones

The zones allocated to the wireless transmitters must be programmed. Refer to *Zone Programming* on page 12 for more information.

 
6.2 Viewing the Wireless Transmitter Signal Strength

Sections [631] to [638]

Once wireless transmitters have been installed and assigned to the Spectra 1759MG, the signal strength of each transmitter can be verified in sections [631] to [638]. Each section represents the signal strength viewer for a specific device. For example, section [631] is the viewer for the device in section [601] and section [638] is the viewer for the device in section [608]. Please note that this feature only works with wireless transmitters assigned to an Expansion Input (zone) as described in *Assigning Wireless Transmitters to the Receiver* on page 18. A reading of 1 is the weakest and a reading of 8 is the strongest. An average reading of 3 or higher is acceptable. Sometimes moving the transmitter or control panel by a small amount will greatly increase the signal reception.

How Do I View a Wireless Transmitter's Signal Strength?

- 1) Press the [ENTER] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter the desired [SECTION NUMBER] (from sections [631] to [638]).
- 4) Press the transmitter's anti-tamper switch or open the corresponding zone.
- 5) **On an LED keypad:** The keypad will illuminate numbers 1 to 8.
On an LCD keypad: The keypad will display numbers from 1 to 8 on the screen. For example, the LCD screen below shows a signal strength reading of 5.



16311 SECTION
1 2 3 4 5 * * *



After entering the desired section, ignore the first reading as it will not be accurate.

You can also use a beep sequence feature to verify a transmitter's signal strength. When you press a transmitter's anti-tamper switch, beep tones emanating from all the keypads connected to the communication bus will advise you of the transmitter's signal strength.

How Do I Attain a Wireless Transmitter's Signal Strength using the Beep Sequence?

- 1) Press the [ENTER] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter the desired [SECTION NUMBER] (from sections [631] to [638]).
- 4) Press the transmitter's anti-tamper switch or open the corresponding zone.
- 5) Listen for the beep tones:
If the signal strength is less than 3 = One beep
If the signal strength is between 3 and 6 = Two beeps
If the signal strength is greater than 6 = Three beeps



This feature cannot be used with any remote controls assigned to the control panel.

6.3 Serial Number Display

Section [630]

This feature will display the serial number of any wireless transmitter on any Spectra keypad.

How Do I View a Transmitter's Serial Number?

- 1) Press the [ENTER] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter the section [630].
- 4) Press the [0] key six times to clear the serial number.
- 5) **On an LED Keypad:** The serial number digits will appear one at a time by illuminating the corresponding LED light. To view the next digit, press the [ENTER] key.
On an LCD Keypad: The first three digits of the serial number will appear. Press the [ENTER] key three times to view the next three digits.

6.4 Supervision Options



The Supervision Options cannot be used with any remote controls assigned to the control panel.

6.4.1 Check-in Supervision

Section [610]: Supervision Options

Option [1] OFF = Check-in Supervision disabled (default)

Option [1] ON = Check-in Supervision enabled

Option [1] enables the Check-in Supervision feature. The Spectra 1759MG waits for each of its assigned wireless transmitters to send a status signal within a specified time period (as programmed in *Check-in Supervision Timer Settings* on page 20) to confirm their presence and functionality. If a device has not sent a signal within that time period, the Spectra 1759MG can generate a trouble, an alarm, and/or transmit a report code to the monitoring station (refer to *Wireless Transmitter Supervision Options* on page 39).

6.4.2 Check-in Supervision Timer Settings

Section [610]: Supervision Options

Option [2] OFF = Check-in supervision interval is every 24 hours (default)

Option [2] ON = Check-in supervision interval is every 80 minutes

Option [2] defines the time period that the control panel will expect a check-in status signal from its assigned wireless transmitters. For example, if the timer is set to 80 minutes (option [2] = ON), the control panel will expect a check-in status signal to be sent from its assigned wireless transmitters every 80 minutes. If the Spectra 1759MG does not receive a signal from one of its wireless transmitters within the period of time defined here, it can then generate a trouble, an alarm, and/or can transmit a report code to the monitoring station (refer to *Wireless Transmitter Supervision Options* on page 39). Refer to *Check-in Supervision* on page 19 for instructions on enabling check-in supervision.

6.4.3 Tamper Supervision

Section [610]: Supervision Options

Option [8] OFF = Tamper Supervision disabled (default)

Option [8] ON = Tamper Supervision enabled

When the control panel detects a tamper or wire fault on a zone or on an expansion module, the control panel can generate an alarm and/or trouble, unless the Tamper Supervision is disabled.

6.4.4 Low Battery Supervision

When the battery voltage of a wireless transmitter (motion detector or door contact) drops below a certain value, the Spectra 1759MG will send a low battery report code to the monitoring station, and a trouble will appear in the keypad's trouble display.



Section [129] option [6] must be enabled in order for Low Battery Supervision to work. For more information, refer to *Wireless Transmitter Low Battery Supervision* on page 39.

6.5 Remote Control Programming

The Spectra 1759MG accepts up to eight fully programmable remote controls. Programming the remote controls is accomplished in three steps:

- 1) Assign the remote controls to the Spectra 1759MG control panel.
- 2) Assign the remote controls to user access codes.
- 3) Program the buttons on the remote controls.

6.5.1 Assigning a Remote Control to the Spectra 1759MG

Sections [731] to [738]: Remote Controls 1 to 8 respectively

Remote controls are assigned to the module using the Automatic Learning method.

How Do I Assign a Remote Control to the Spectra 1759MG?

- 1) Press the [ENTER] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter the desired [SECTION NUMBER] (from sections [731] to [738]).
- 4) Press and hold any button on the remote control until the confirmation beep sounds ("Beep-Beep-Beep-Beep").



If you are having trouble assigning the remote control, the environment may be too noisy. Therefore, we recommend that you assign the remote controls before installing the transmitters.

6.5.2 Deleting Assigned Remote Controls

Sections [731] to [738]: Remote Controls 1 to 8 respectively

How Do I Delete a Remote Control?

- 1) Press the [ENTER] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter the desired [SECTION NUMBER] (from sections [731] to [738]).
- 4) Press the [FORCE] button.

6.5.3 Assigning Remote Controls to User Access Codes

Sections [701] to [708]: Remote Controls 1 to 8 respectively

Each remote control must be assigned to a user access code. All user access codes are given a user number from 001 to 048. Enter the desired user number in a section from [701] to [708] that represent the remote control assigned in sections [731] to [738] (refer to *Assigning a Remote Control to the Spectra 1759MG* on page 20). For example, the remote control assigned in section [731] will be assigned to the user access code designated in section [701].

How Do I Assign a Remote Control to a User Access Code?

- 1) Press the [ENTER] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter the desired [SECTION NUMBER] (from sections [701] to [708]).
- 4) Enter the [USER NUMBER] to be assigned to the remote control (001 to 048).

6.5.4 Programming the Remote Control Buttons

Sections [711] to [718]: Remote Controls 1 to 8 respectively

Each remote control can be programmed to perform up to 5 different actions. Each digit in sections [711] to [718] represents a button or combination of buttons (refer to Table 6 on page 21). When a user arms or disarms using the remote control, the control panel will arm or disarm **all** the areas assigned to the user access code (see *Assigning Remote Controls to User Access Codes* on page 21). Sections [711] to [718] represent the remote controls assigned to sections [731] to [738] (refer to *Assigning a Remote Control to the Spectra 1759MG* on page 20). For example, the buttons for the remote control assigned in section [731] will be programmed in section [711].

How Do I Program the Remote Control's Buttons?

- 1) Press the [ENTER] key.
- 2) Enter your [INSTALLER CODE].
- 3) Enter the desired [SECTION NUMBER] (from sections [711] to [718]).
- 4) Enter the [HEXADECIMAL VALUE] (0 to D) of the desired button option from Table 7 in the appropriate space (refer to Table 6). If you do not wish to program all the buttons or button combinations, simply press the [ENTER] key at any time to save and exit.



The user code assigned to the remote control (refer to *Assigning Remote Controls to User Access Codes* on page 21) must have the same User Options enabled. For example, if you enable the Force Arming button option, you must enable the appropriate Force Arming user option. Also, if you enable any Panic button options, you must enable the Panic options in the control panel (refer to *Keypad Panic Options* on page 26).

Table 6: Remote Control Button Programming

| RC# | Section | RC Buttons | | | | | | | |
|-----|---------|------------------------------|--|--|--|--|--|--|--|
| | | Default: (1 5 0 0 0 0 0 0) | | | | | | | |
| 1 | [711] | | | | | | | | |
| 2 | [712] | | | | | | | | |
| 3 | [713] | | | | | | | | |
| 4 | [714] | | | | | | | | |
| 5 | [715] | | | | | | | | |
| 6 | [716] | | | | | | | | |
| 7 | [717] | | | | | | | | |
| 8 | [718] | | | | | | | | |

= These button combinations are not available with the MG-REM1 or MG-RAC1 remote controls and cannot be programmed.

Figure 13: Remote Control Button Identification



Table 7: Button Options

| | |
|-------------------------------------|---|
| [FORCE] = Button Disabled | [7] = Regular Arm and Disarm |
| [1] = Regular Arm | [8] = Generate a Panic 1† Alarm (Police) |
| [2] = Stay Arm | [9] = Generate a Panic 2† Alarm (Medical) |
| [3] = Instant Arm | [A] = Generate a Panic 3† Alarm (Fire) |
| [4] = Force Arm | [B] = Activates any PGMs that have Event Group #07* as their Activation Event |
| [5] = Disarm | [C] = Activates any PGMs that have Event Group #08* as their Activation Event |
| [6] = Disarm when there is no alarm | [D] = Activates any PGMs that have Event Group #09* as their Activation Event |

* Event Group #07, #08 and #09 (Button Pressed on Remote) of the Spectra 1759MG PGM Table. For the PGM Table, please refer to the *Spectra 1759MG Programming Guide (1759MG-EP)*.

† The Panic feature must be enabled in the control panel.

Part 7: Arming and Disarming Options

7.1 Switch To Stay Arming

Section [133]: Partition 1, Section [134] = Partition 2

Option [4] OFF = Switch to Stay Arming Disabled (default)

Option [4] ON = Switch to Stay Arming Enabled

If a user Regular arms a partition, but does not exit through (open and close) an entry delay zone during the exit delay, the control panel can be programmed to switch from Regular arming to Stay arming.

7.2 Stay Arming with Delay

Section [133]: Partition 1, Section [134] = Partition 2

Option [5] OFF = Stay Arming with Delay Disabled (default)

Option [5] ON = Stay Arming with Delay Enabled

If a partition is Stay armed when this feature is enabled, all the zones in the partition, **except 24Hr zones and Stay zones**, are associated with the Stay Delay. Therefore, the control panel will not generate an alarm if a zone is breached until the Stay Delay has elapsed. This feature prevents false alarms by allowing users enough time to disarm their system if a zone is accidentally triggered. For example, if a user opens an armed window or crosses an armed detector on the way to the kitchen in the middle of the night, the user will have enough time to disarm the system before the alarm is generated. Each partition's Stay Delay follows the value programmed in Entry Delay Timer 2 in section [070].

7.3 Regular Arming Switches to Force Arming (Not to be used with UL Installations)

Section [131]: Arming/Disarming Options

Option [2] OFF = Regular Arming Switches to Force Arming Disabled (default)

Option [2] ON = Regular Arming Switches to Force Arming Enabled

With this feature enabled, the control panel will always Force arm instead of Regular arm when a valid user access code with the Force Arming Option is entered. In installations where the user must always Force arm when leaving the protected area, this feature allows users to Force arm without pressing the [FORCE] key before entering their user access code.



Force arming cannot be done using a keyswitch. Force arming is not supported by keyswitches.

7.4 Restrict Arming on Battery Fail

Section [130]: Arming/Disarming Options

Option [5] OFF = Permit arming on battery failure (default)

Option [5] ON = Restrict arming on battery failure

If this option is enabled, the control panel will not arm the system if the control panel detects that the backup battery is disconnected, that its fuse is blown, or that the battery voltage drops to less than 10.5V. The control panel will not arm the system until all battery trouble conditions are rectified.

7.5 Restrict Arming on Tamper Failure

Section [130]: Arming/Disarming Options

Option [6] OFF = Permit arming on tamper failure (default)

Option [6] ON = Restrict arming on tamper failure

If this option is enabled, the control panel will not arm the system if the control panel detects a tamper trouble on one or more zones. The control panel will not arm the system until all tamper trouble conditions are rectified.



This feature will not function if the Tamper Recognition Options (see page 25) are disabled or whenever the tampered zone is bypassed and the Tamper Bypass Options (see page 26) have been enabled.

7.6 Timed Auto-Arming

Section [133] = Partition 1, [134] = Partition 2

Option [1] OFF = Timed Auto-Arming Disabled (default)

Option [1] ON = Timed Auto-Arming Enabled

Each partition can be programmed to arm every day at the time specified by the Auto-arm Timer. The Auto-arming Options (see page 24) determine the partition's arming method. Any open zones detected when a partition is Auto-Armed will be bypassed regardless of their definition (except 24Hr zones). The control panel will enter a 60-second exit delay period before arming the system. At this point, Auto-arming can be cancelled by entering a valid access code. Once the partition has successfully armed, the control panel can transmit the Timed Auto-arming report code programmed in section [172].

Example: To automatically arm partition 2 everyday at 6:15PM, enable Timed Auto-arming for partition 2 by turning on option [1] in section [134]. Then key in 18:15 into section [112].

7.6.1 Auto-Arm Timer

Section [111] = Partition 1, [112] = Partition 2

Select the section corresponding to the desired partition and program the time (use the 24-hour clock i.e. 6:30PM = 18:30) that you wish the control panel to attempt to arm the selected partition and/or send the Late to Close report code.

7.7 No Movement Auto-Arming

Section [133] = Partition 1, [134] = Partition 2

Option [2] OFF = No Movement Auto-Arming Disabled (default)

Option [2] ON = No Movement Auto-Arming Enabled

If no movement occurs in a partition's protected area for the period specified by the No Movement Timer (see page 24), the control panel can automatically arm that partition. The Auto-arming Option described on page 24 of this manual determines the partition's arming method. Any open zones detected when a partition is Auto-armed will be bypassed regardless of their definition (except 24Hr zones). Upon arming, the control panel will transmit the No Movement report code if programmed in section [172]. Regardless of whether the system was successfully armed or not, the control panel will always transmit the No Movement report code if programmed in section [172]. If No Movement Auto-arming is disabled, the control panel will still send the No Movement report code at the time specified by the No Movement Timer.

Example: To arm partition 1 whenever there is no movement for a period of 4 hours, enable No Movement Auto-arming for partition 1 by turning on the [2] Option in section [133]. Then in section [075] enter 016 (16x15min = 240min = 4 hours).

7.7.1 No Movement Timer

Section [075] = Partition 1, [076] = Partition 2

001 to 255 x15min, Default = Disabled

Select the section corresponding to the desired partition and program the interval of time without movement you wish the control panel to wait before arming and/or sending the No Movement report code. If No Movement Auto-arming is disabled, the control panel can still send the No Movement report code when no movement has been detected for the period specified by the No Movement Timer.

7.8 Auto-Arming Options (Not to be used with UL installations)

Section [133] = Partition 1, [134] = Partition 2

Option [3] OFF = Regular Arming (default)

Option [3] ON = Stay Arming

When using Timed Auto-arming or No Movement Auto-arming (see pages 23 and 23), the control panel can Regular or Stay arm (see page 44) the selected partition.

7.9 One-Touch Arming (Not to be used with UL installations)

Section [130]: Options [1] to [4]

Option [1] ON = Press & hold the [ENTER] key for One-touch Regular Arming.

Option [2] ON = Press & hold the [STAY] key for One-touch Stay Arming.

Option [3] ON = Press & hold the [FORCE] key for One-touch Force Arming.

Option [4] ON = Press & hold the [BYP] key for One-touch Bypass Programming.

The One-touch arming features allow users to arm the system without having to enter any access codes. To arm the system, press and hold the appropriate key (see above) for approximately 2 seconds. If the system is partitioned (see page 36), you must also press the key corresponding to the partition you wish to arm. For more information on the different arming methods, please refer to page 44.

7.10 Exit Delay

Section [071] = Partition 1, [072] = Partition 2

001 to 255 seconds, Default = 30 seconds, *Maximum 60 seconds for UL Listed systems*

After entering the required arming sequence (i.e. user access code, etc.), the exit delay parameter determines the amount of time a user has to leave the protected area before the control panel arms the partition. The exit delay applies to all zones in the selected partition. When enabled, the keypad will beep once every second during the exit delay and will beep rapidly during the final 10 seconds of the exit delay.

7.10.1 Beep On Exit Delay

Section [130]: Arming/Disarming Options

Option [8] OFF = Beep on Exit Delay Disabled

Option [8] ON = Beep on Exit Delay Enabled (default)

7.11 Bell Squawk On Arm/Disarm with Keypad

Section [130]: Arming/Disarming Options

Option [7] OFF = Bell Squawk on Arm/Disarm Disabled (default)

Option [7] ON = Bell Squawk on Arm/Disarm Enabled

When this feature is enabled, the bell or siren will squawk once upon arming and twice upon disarming.

7.12 Bell Squawk On Arm/Disarm with Remote Control

Section [131]: Arming/Disarming Options

Option [3] OFF = Bell Squawk on Arm/Disarm with Remote Control Disabled (default)

Option [3] ON = Bell Squawk on Arm/Disarm with Remote Control Enabled

When this feature is enabled, the bell or siren will squawk once upon arming with a remote control and twice upon disarming with a remote control. Must be enabled for UL installations.

7.13 No Exit Delay When Arming with Remote Control

Section [131]: Arming/Disarming Options

Option [4] OFF = Provides Exit Delay When Arming with a Remote Control (default)

Option [4] ON = No Exit Delay When Arming with a Remote Control

When the option is enabled, the panel cancels the exit delay (arms instantly) when a partition is armed with a remote control. When disabled, the exit delay timer will start when a partition is armed with a remote control.

7.14 No Exit Delay Beeps and No Bell Squawk When Stay Arming

Section [131]: Arming/Disarming Options

Option [5] OFF = No Exit Delay Beeps and No Bell Squawk When Stay Arming Disabled (default)

Option [5] ON = No Exit Delay Beeps and No Bell Squawk When Stay Arming Enabled

With this feature enabled, the control panel will prevent the bell or siren from squawking and the keypads from beeping during the exit delay, whenever a partition is Stay armed.

Part 8: Alarm Options

8.1 Bell Cut-Off Timer

Section [073] = Partition 1, [074] = Partition 2

000 = Disabled, 001 to 255 minutes, Default = 4 minutes, **5 minutes minimum for ULC installations**

After an audible alarm, the bell or siren will stop upon disarming of the partition or when the Bell Cut-Off Timer has elapsed, whichever comes first.

8.2 Recycle Alarm

After the Bell Cut-Off Timer and the Recycle Delay have elapsed, the control panel will re-verify the zone status. If there are any open zones, the control panel will generate another alarm. In one armed period, the control panel will repeat this sequence the number of times defined by the Recycle Counter.

8.2.1 Recycle Alarm Delay

Section [090]

000 = disabled, 001 to 255 minutes, Default = Disabled

The Recycle Delay determines the amount of time after Bell Cut-Off that the control panel will wait before re-verifying zone status.

8.2.2 Recycle Counter

Section [091]

000 = disabled, 001 to 255, Default = Disabled

The Recycle Counter determines the number of times the control panel will re-verify the zone status after Bell Cut-Off in one armed period.

8.3 Tamper Recognition

Section [132]: Zone Options

[1] OFF / [2] OFF: *Tamper Recognition Disabled (default)*

If the system is armed or disarmed, the control panel will display the zone as open in the keypad display, but will not generate an alarm. This option is not permitted on UL systems.

[1] OFF / [2] ON: *Trouble Only*

If the system is armed and a tamper wiring failure occurs on a zone, the control panel will follow the zone's Alarm Types setting (see page 16). **If the system is disarmed** and a tamper wiring failure occurs on a zone, a Tamper/Zone Wiring Failure will appear in the keypad's trouble display (see page 42) and the control panel will transmit the appropriate Zone Tamper report code (see page 29).

[1] ON / [2] OFF: *Silent Alarm*

If the system is armed and a tamper wiring failure occurs on a zone, the control panel will follow the zone's Alarm Types setting (see page 16). **In a disarmed system**, it functions the same as the Trouble Only setting, but it will also generate a silent alarm. A silent alarm will not trigger any bells or sirens, but the system will have to be disarmed.

[1] ON / [2] ON: *Audible Alarm*

In an armed system and a tamper wiring failure occurs on a zone, the control panel will follow the zone's Alarm Types setting (see page 16). **In a disarmed system**, it functions the same as Trouble Only setting, except it will also generate an audible alarm.

8.3.1 Tamper Bypass Options

Section [132]: Zone Options

Option [3] OFF = Will generate a tamper if detected on a bypassed zone (default)

Option [3] ON = Tampers on bypassed zones will be ignored

With option [3] on, the Tamper Recognition feature follows the zone bypass definition. This means the control panel will ignore any tampers detected on a bypassed zone. With option [3] off, Tamper Recognition ignores the bypass definition. This means the control panel will generate an incident as per Tamper Recognition settings if a tamper or wire fault occurs on a bypassed zone.

8.4 Keypad Panic Options

Section [128]: General Options

Option [1] OFF = Emergency Panic Disabled (default)

Option [1] ON = Emergency Panic Enabled

Pressing the [1] and [3] keys simultaneously on the keypad for 2 seconds will generate a silent or audible alarm as defined by option [4].

Option [2] OFF = Auxiliary Panic Disabled (default)

Option [2] ON = Auxiliary Panic Enabled

Pressing the [4] and [6] keys simultaneously on the keypad for 2 seconds will generate a silent or audible alarm as defined by option [5].

Option [3] OFF = Fire Panic Disabled (default)

Option [3] ON = Fire Panic Enabled

Pressing the [7] and [9] keys simultaneously on the keypad for 2 seconds will generate a silent or audible alarm as defined by option [6].

Option [4] OFF = Emergency Panic is Silent (default)

Option [4] ON = Emergency Panic is Audible

Option [5] OFF = Auxiliary Panic is Silent (default)

Option [5] ON = Auxiliary Panic is Audible

Option [6] OFF = Fire Panic is Silent (default)

Option [6] ON = Fire Panic is Pulsed

Silent alarm:

The control panel emits a confirmation beep and transmits the appropriate Panic report code if programmed in section [195]. The control panel will not enable the keypad buzzers or the control panel's BELL output (no audible alarm).

Audible alarm:

Same as silent alarm, except the keypad buzzers and the BELL output will activate until a user cancels the alarm (disarms) with a valid user access code or when the Bell Cut-Off Timer elapses (see page 25).

Fire (pulsed) alarm:

Same as audible operation, except that the BELL output will be pulsed as shown in Figure 11 on page 15.



Whether the system is partitioned or not, the control panel will report all panic alarms to partition 1.

8.5 Panic Lockout Timer


Section [094]

When a panic alarm is activated, the control panel can ignore the disarm signal from a remote control for a specified period. This prevents an aggressor from disarming the system by remote control during a panic situation. In section [094] enter a 3-digit value (000 to 255, 000 = disabled) representing the number of seconds that the remote controls will be locked out of the system.

Part 9: Reporting and Dialer settings

The following section explains all the features and options that must be programmed in order for your security system to properly report system events to a monitoring station. When an event (e.g. zone in alarm) occurs in the system, the control panel verifies if a report code was programmed in the section corresponding to the event (except Ademco Contact ID "All Codes"). If a report code was programmed, the control panel will dial the monitoring station telephone number defined by the Event Call Direction feature. When the monitoring station answers, the control panel will transmit the System Account Code, followed by the programmed report code.

Figure 14: Event Reporting

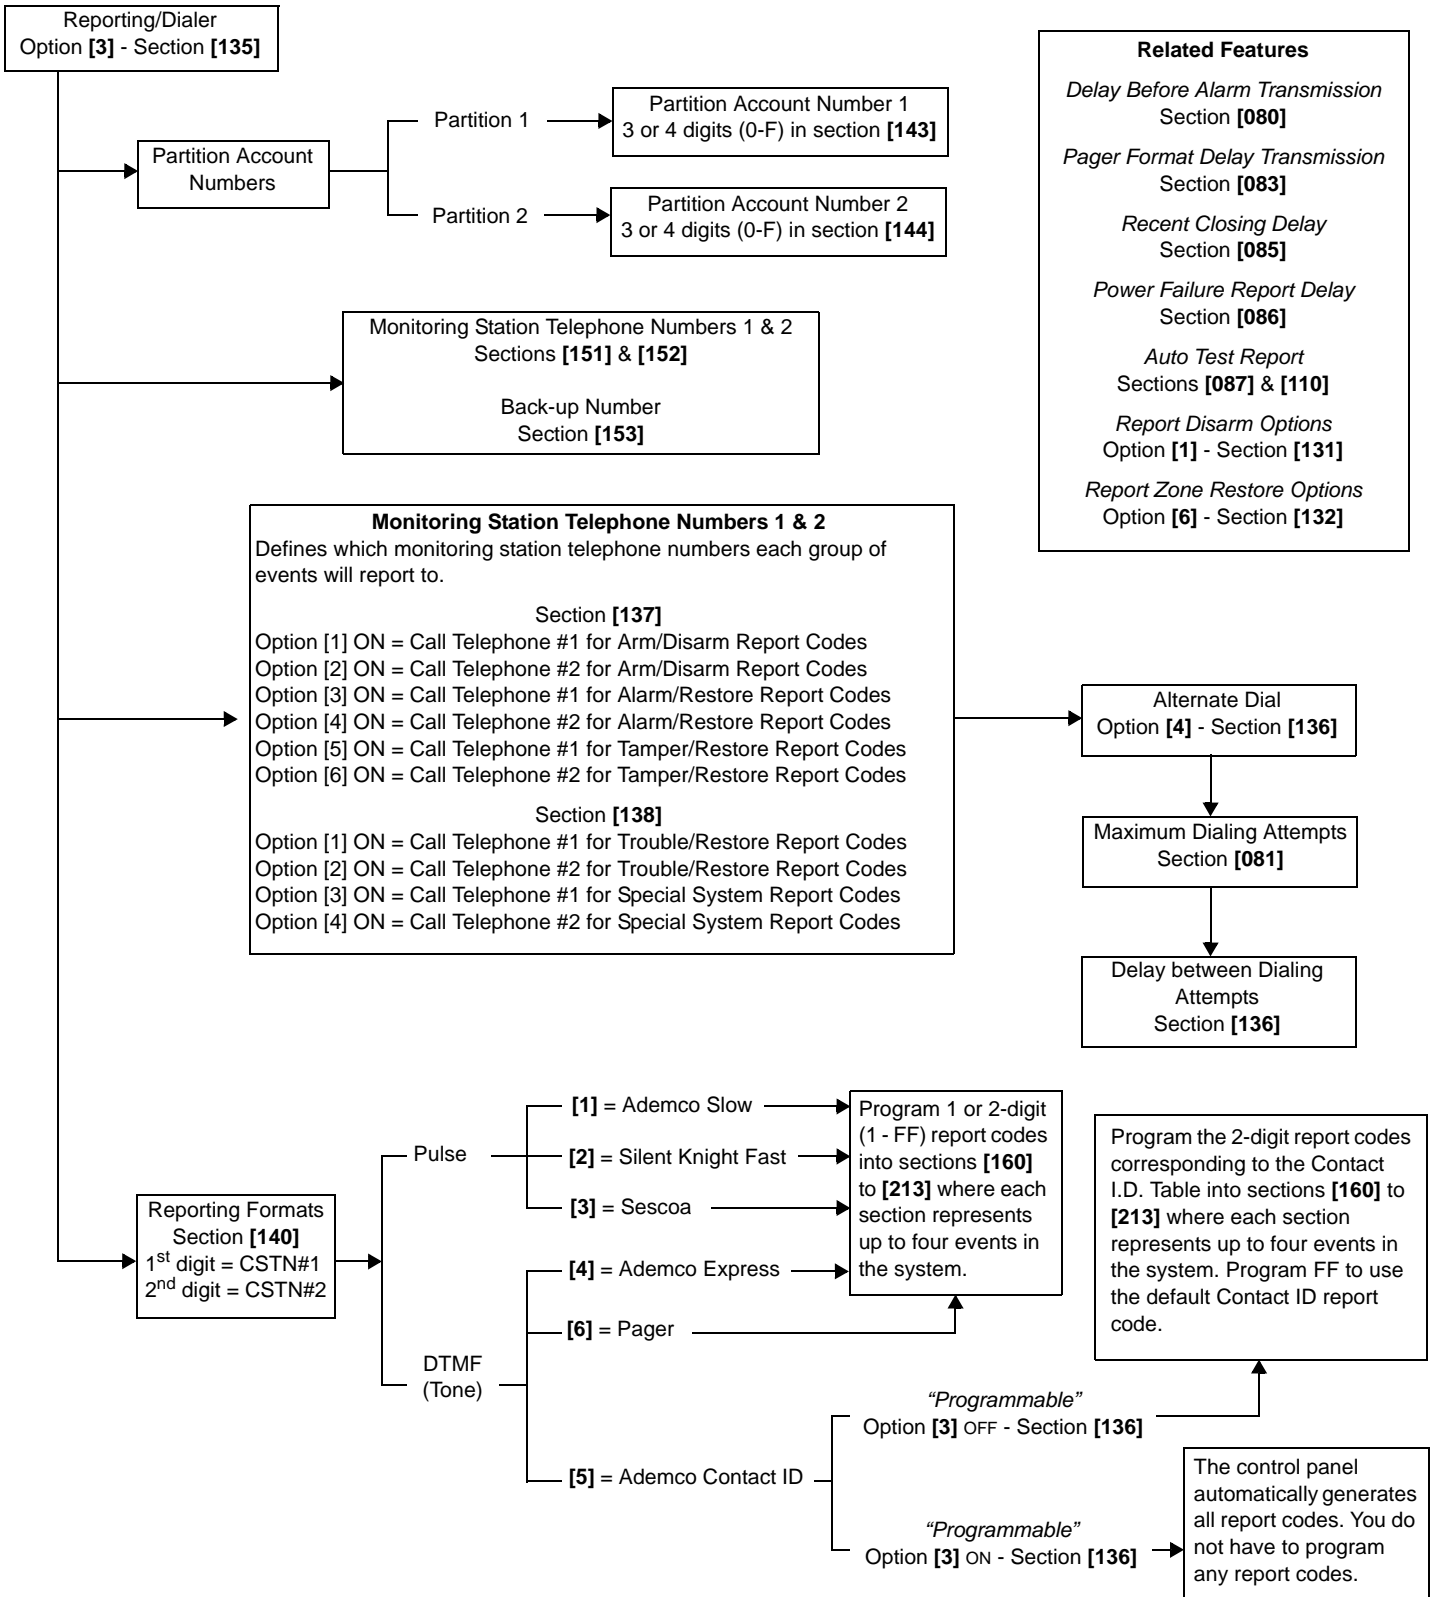

9.1 Reporting/Dialer (Enable/Disable)

Section [135]: Dialer Options

Option [3] OFF = Reporting/Dialer Disabled (default)

Option [3] ON = Reporting/Dialer Enabled

9.2 Report Codes

A report code is a 1- or 2-digit hexadecimal value consisting of digits from 1 to F. Each section from [160] to [213] represents a set of up to four specific events and each of these events can be programmed with a separate 1- or 2-digit report code.



Only the Ademco Slow, Silent Knight, Sescoa and Pager Formats support 1-digit report codes. To program a 1-digit report code, press the [FORCE] key followed by the desired hexadecimal digit or vice versa.

When a specific event occurs, the control panel will attempt to transmit the programmed report code to the monitoring station. The method of report code transmission is defined by the Reporting Formats (see page 30) and the Event Call Direction (see page 32). These two items define how and where the report codes are transmitted. If you are using the Ademco Contact ID “All Codes” format, sections [160] to [213] do not have to be programmed. For more information, refer to *Reporting Formats* on page 30. The following sub-sections provide a brief description of the events that the control panel can report.

9.2.1 Arming Report Codes

Sections [160] to [171]

A report code can be programmed for each of the 48 user access codes. When using an access code to arm a partition, the control panel can send the appropriate report code to the monitoring station, identifying which access code was used to arm the partition.

9.2.2 Special Arming Report Codes

Sections [172] and [173]

Whenever the system is armed using one of the special arming features listed below, the control panel can send the appropriate report code to the monitoring station identifying how the system was armed.

Section [172]

- **Timed Auto-Arming:** A partition has armed itself at the programmed time (see page 23).
- **Late to Close:** Reports every day at the time specified by the Auto-arm Timer (see page 23).
- **No Movement:** A partition has armed itself after the programmed period without movement (see *No Movement Auto-Arming* on page 23).
- **Partial Arming:** A partition was Stay, Instant or Force armed or armed with Bypassed zones.

Section [173]

- **One-Touch Arming:** A partition was armed using a One-touch arming feature (see page 24).
- **Remote Arming:** A partition was armed using the Winload software.
- **Keyswitch Arming:** A partition was armed using a keyswitch (see page 14).
- **Closing Delinquency:** Partition 1 was not armed within a set period of time (see page 33).

9.2.3 Disarming Report Codes

Sections [174] to [185]

A report code can be programmed for each of the 48 user access codes. Whenever an access code is used to disarm an armed partition or a partition in alarm, the control panel can send the appropriate report code to the monitoring station, identifying which access code was used to disarm the partition.



The Disarming and the Special Disarming report codes can be transmitted every time a partition is disarmed or only when a partition is disarmed after an alarm (see *Disarm Reporting Options* on page 33).

9.2.4 Special Disarming Report Codes

Section [186]

Whenever using one of the special disarming features, the control panel can send the report code to the monitoring station, identifying how the system was disarmed.

- **Cancel Auto-Arm:** A partition is disarmed during the Timed Auto-arm's 60-second exit delay (see *Timed Auto-Arming* on page 23). Only reports if Disarming Reporting Options (see page 33) are set to always report disarming.
- **Remote Disarm:** System is disarmed using the Winload software.
- **Keyswitch Disarming:** System disarmed using a keyswitch (see page 14).
- Future use

9.2.5 Zone Alarm Report Codes

Sections [187] to [190]

A report code can be programmed for each of the 15 available zones. Whenever a zone generates an alarm, the control panel can send the appropriate report code to the monitoring station, identifying which zone generated an alarm.

9.2.6 Zone Alarm Restore Report Codes

Sections [191] to [194]

A report code can be programmed for each of the 15 available zones. The control panel can transmit these report codes to the monitoring station identifying which zone was restored.



A zone is restored when it closes after generating an alarm or once the bell has cut-off after alarm generation. Please refer to *Zone Restore Report Options* on page 34.

9.2.7 Special Alarm Report Codes

Sections [195] and [196]

Whenever the system generates an alarm due to one of the conditions listed below, the control panel can send the appropriate report code to the monitoring station identifying the type of alarm.

Section [195]

- **Emergency Panic:** Panic keys [1] and [3] have been pressed (see page 26).
- **Auxiliary Panic:** Panic keys [4] and [6] have been pressed (see page 26).
- **Fire Panic:** Panic keys [7] and [9] have been pressed (see page 26).
- **Recent Closing:** Reports when an alarm is generated after arming the system within period defined by the Recent Close Delay (see page 33).

Section [196]

- **Auto Zone Shutdown:** A zone communicates more than the programmed number of transmissions in a single armed period (see page 16).
- **Duress:** A Duress access code is keyed in (see page 11).
- **Keypad Lockout:** If a consecutive number of invalid codes are entered into a keypad, the control panel can be set to deny access from all keypads for a specified period.
- Future use

9.2.8 Zone Tamper Report Codes

Section [197] to [200]

A report code can be programmed for each of the 15 available zones. Whenever a tamper or wire fault occurs on a zone, the control panel can send the appropriate report code to the monitoring station identifying which zone was tampered.

9.2.9 Zone Tamper Restore Report Codes

Sections [201] to [204]

A report code can be programmed for each of the 15 available zones. Whenever a tampered zone is restored, the control panel can send the appropriate report code to the monitoring station identifying which zone has been restored.



If Tamper Recognition (see page 25) is disabled, the control panel will not report the occurrence of any tampers, wire faults or tamper restores.

9.2.10 System Trouble Report Codes

Section [205] to [207]

Whenever the system generates one of the instances listed below, the control panel can send the appropriate report code to the monitoring station identifying the type of system trouble.

Section [205]

- Future use
- **AC Failure:** The control panel has detected a loss of AC power. Transmission of this report code can be delayed (see *Power Failure Report Delay* on page 33).
- **Battery Failure:** Backup battery is disconnected or battery voltage is $\leq 10.5V$.
- **Auxiliary Supply:** Auxiliary power supply has overloaded (current consumption is $>1.1A$).

Section [206]

- **Bell Output Overload:** Bell/siren output has overloaded (see page 4).
- **Bell Output Disconnected:** Devices connected to the Bell Output have been disconnected.
- **Timer Loss:** The control panel has detected a loss in time or clock failure (see page 36).
- **Fire Loop Trouble:** The control panel has detected a tamper trouble on a fire zone.

Section [207]

- **Wireless Low Battery:** The battery voltage of an Magellan wireless transmitter (motion detector or contact switch) has dropped below recommended limits.
- **Module Fault:** Will report if all keypads connected to the control panel have been disconnected or if a module with its corresponding supervision option enabled in the control panel (see pages 38 and 39) is disconnected.
- **Printer Fault:** An error has occurred on the Printer Module.
- **Fail To Communicate:** The control panel has failed all attempts to communicate with the monitoring station. The report code will be transmitted upon the next successful attempt.

9.2.11 System Trouble Restore Codes

Sections [208] to [210]

Whenever the system restores one of the troubles listed in *System Trouble Report Codes* on page 29, the control panel can send the appropriate report code to the monitoring station identifying the type of system trouble restore. If Telephone Line Monitoring is enabled (see page 34), the control panel can also transmit a TLM Restore report code.

9.2.12 Special Reporting Codes

Sections [211] to [213]

Whenever the system generates one of the instances listed below, the control panel can send the appropriate report code to the monitoring station identifying the type of system occurrence.

Section [211]

- **Cold Start:** The control panel was completely shutdown (no battery, no AC) and then was re-started.
- **Test Report:** A test report has been generated automatically (see *Auto Test Report* on page 33).
- Not available
- **PC Exit:** The control panel has ended communication with WinLoad.

Section [212]

- **Installer In:** Installer has entered the programming mode.
- **Installer Out:** Installer has exited the programming mode.
- Future use
- Future use

Section [213]

- **Tx Supervision Loss:** Wireless Transmitter Supervision (see SPC-319 Instruction Sheet) has been enabled and a transmitter is no longer communicating with the system.
- **Tx Supervision Restore:** Reports when the above trouble has been restored
- Future use
- Future use

9.3 Monitoring Station Telephone Numbers

Section [151] = Phone#1, [152] = Phone#2, [153] = Backup Phone#: Up to 32 digits

The 1759MG control panel can dial up to 2 different monitoring station telephone numbers. You can enter any digit from 0 to 9 and any special keys or functions (see Table 8) up to a maximum of 32 digits. For more information on how these telephone numbers are used, please refer to *Event Call Direction* on page 32 and *Reporting Formats* on page 30. After the Maximum Dialing Attempts (see page 33) to one monitoring station telephone number have failed, the control panel will then dial the backup telephone number. If the Alternate Dial Option (see page 33) is enabled, the control panel will dial the programmed backup telephone number after every failed attempt. If no backup telephone number is programmed, the control panel will never report to the backup telephone number. Also refer to *Delay Between Dialing Attempts* on page 33.

Table 8: Special Keys for Telephone Numbers

| Press | Action or Value |
|-----------------|---|
| [STAY] | * |
| [BYP] | # |
| [MEM] | switch from pulse to tone dialing or vice versa |
| [TBL] or [TRBL] | 4-second pause |
| [FORCE] | deletes current digit |
| [PG] or [FNC1] | inserts blank space |

9.4 Partition Account Numbers

Section [143] = Partition 1, [144] = Partition 2

All report codes are preceded by a 4-digit or 3-digit Partition Account Number to ensure correct identification in a partitioned system. Partition account numbers can be any hexa-digit from 1 to F. To enter a 3-digit account number, simply press the [FORCE] key followed by the 3-digit account number. Also, when using 3-digit account numbers, you must use 1-digit report codes.

9.5 Reporting Formats

Section [140]: 1st digit = Format for Phone #1, 2nd digit = Format for Phone #2

The Spectra 1759MG can use a number of different reporting formats and each monitoring station telephone number can be programmed with a different reporting format. The first digit entered into section [140] represents the reporting format used to communicate with Monitoring Station Telephone Number 1, the second digit represents the reporting format used to communicate with Monitoring Station Telephone Number 2. The Backup Telephone Number uses the same reporting format as the last monitoring station telephone number that was dialed.

Table 9: Reporting Formats

| Value Entered | Reporting Format |
|---------------|--|
| 1 | Ademco Slow (1400Hz, 1900Hz, 10BPS) |
| 2 | Silent Knight Fast (1400Hz, 1900Hz, 10BPS) |
| 3 | SESCOA (2300Hz, 1800Hz, 20BPS) |
| 4 | Ademco Express (DTMF 4+2) |
| 5 (Default) | Ademco Contact ID |
| 6 | Pager Format |



If Hexadecimals (0 to FF) are used to program the report codes, verify that the pager also supports Hexadecimals. If the pager does not support Hexadecimals, use only the digits 0 to 9.

UL Note: The installer is required to verify the complete compatibility of the DAC Receiver and formats at least once per year.

9.5.1 Standard Pulse Formats

The Spectra 1759MG can use the Ademco slow, Silent Knight and Sescoc standard pulse reporting formats (see Table 9 above).

9.5.2 Ademco Express

The Ademco Express is a high-speed reporting format, which will transmit the 2-digit (11 to FF) report codes programmed into sections [160] to [213]. Unlike other Ademco formats, the Ademco Express does not use the Contact ID report codes.

9.5.3 Ademco Contact ID

Ademco Contact ID is a fast communicator format that uses tone reporting instead of pulse reporting. This communicator format also uses a pre-defined list of industry standard messages and report codes that will suit most of your basic installation needs. Please refer to the Contact ID Report Codes List in the Programming Guide for a complete list of these report codes and messages.

9.5.4 Contact ID Options

Section [136]: Dialer Options
 Option [3] OFF = Programmable Codes
 Option [3] ON = All Codes (default)

When using the Programmable Codes format, use the Ademco Contact ID Report Codes List in the *Spectra System Programming Guide* (version 2.0 or higher) to program the desired report codes into sections [160] to [213]. Enter FF to use the default Contact ID report codes. Press the [FORCE] key to enter a 0 value. When using the All Codes format, the control panel will automatically generate Contact ID report codes for every event in sections [160] to [213]. Refer to the "All Codes" Ademco Contact ID Report Code List in the *Spectra System Programming Guide*.



When using the Ademco Contact ID Programmable format, both telephone numbers must use this reporting format.

9.5.5 Pager Reporting Format

Section [136]: Dialer Options
 [6] OFF / [7] OFF: 1 call to the pager/cellular telephone
 [6] OFF / [7] ON: 2 calls to the pager/cellular telephone
 [6] ON / [7] OFF: 3 calls to the pager/cellular telephone
 [6] ON / [7] ON: 4 calls to the pager/cellular telephone

Using this format allows the control panel to transmit report codes to a pager or a cellular telephone. Since the control panel cannot confirm whether the transmission was successful or not, it can be programmed to call the pager or cellular telephone up to four times and transmit the report codes each time. To ensure that the report is received, the control panel transmits the account number, the report code and the # sign four times during each call. Also, refer to *Pager Delay* on page 32.

9.5.6 Pager Format Transmission Options

Section [136]: Dialer Options
 Option [8] OFF = Transmit Report Code(s) after Pager Delay (default)
 Option [8] ON = Transmit Report Code(s) immediately

The Pager Reporting Format can be configured to transmit immediately or to transmit after a pager delay has elapsed. With option [8] ON, the control panel will immediately transmit (personal dialing) the report code(s) to a pager or a cellular phone. The Pager delay in section [083] will then become the length of time that the control panel will continue to transmit the report code(s). With option [8] OFF, the control panel will transmit the report code(s) to a pager or cellular phone only after the Pager delay has elapsed.

9.6 Pager Delay

Section [083]

001 to 255 seconds, default = 5 seconds

When using the Pager Reporting Format (see page 31), the control panel will wait for the Pager Delay period before transmitting the report codes. This is to allow time for the pager system to provide a dial tone or to bypass the “welcome” message before sending data.

9.7 Event Call Direction

Section [137]

Option [1] ON = Call Telephone #1 for

Option [2] ON = Call Telephone #2 for

→ Arm/Disarm Report Codes in sections [160] to [186] (page 28)

Option [3] ON = Call Telephone #1 for

Option [4] ON = Call Telephone #2 for

→ Alarm/Restore Report Codes in sections [187] to [196] (pages 28 to 29)

Option [5] ON = Call Telephone #1 for

Option [6] ON = Call Telephone #2 for

→ Tamper/Restore Report Codes in sections [197] to [204] (page 29)

Section [138]

Option [1] ON = Call Telephone #1 for

Option [2] ON = Call Telephone #2 for

→ Trouble/Restore Report Codes in sections [205] to [210] (pages 29 to 30)

Option [3] ON = Call Telephone #1 for

Option [4] ON = Call Telephone #2 for

→ Special Report Codes in sections [211] to [213] (page 30)

This feature determines where each group of events will be reported. The control panel events are divided into five groups (see above) where each event group can be programmed to dial one or both monitoring station telephone numbers (MSTNs). When a reportable event occurs in the system, the control panel will verify that one of the two telephone numbers has been enabled. The control panel will begin by dialing the selected telephone number(s). If both numbers were selected it will begin with MSTN1. After the Maximum Dialing Attempts (see page 33) to one MSTN have failed, the control panel will then dial the backup telephone number. If the Alternate Dial Option (see page 33) is enabled, the control panel will dial the programmed backup telephone number after every failed attempt. If no backup telephone number is programmed, the control panel will never report to the backup telephone number. Also, refer to *Delay Between Dialing Attempts* on page 33.

Example: *The system is armed and zone 1 has been breached causing an alarm. If option [3] is off and option [4] is on in section [137], the control panel will attempt to communicate with MSTN2 in order to transmit the Zone 1 Alarm report code programmed in section [187].*

9.8 Dialing Method

Section [135]: Dialer Options

Option [4] OFF = Pulse Dialing. (Also, refer to Pulse Ratio, below)

Option [4] ON = Tone/DTMF Dialing (default)

9.9 Pulse Ratio

Section [135]: Dialer Options

Option [5] OFF = European Pulse Ratio of 1:2

Option [5] ON = U.S.A. Pulse Ratio of 1:1.5 (default)

When using Pulse dialing, you can select one of two Pulse Ratios. Although most European countries use the 1:2 pulse ratio, the 1:1.5 ratio may provide better results in some cases. The same applies for North American countries. If the 1:1.5 pulse ratio is not providing the desired results, the 1:2 ratio may be used.

9.10 Bell on Communication Failure

Section [135]: Dialer Options

Option [6] OFF = Bell On Communication Failure Disabled (default)

Option [6] ON = Bell On Communication Failure Enabled

If the control panel fails to communicate with the monitoring station when the system is armed, it will enable the BELL output, setting off any bells or sirens connected to the output.

9.11 Dial Tone Delay

Section [136]: Dialer Options

Option [5] OFF = Dialer will continue to dial if no dial tone is present after 4 seconds (default).

Option [5] ON = Dialer will hang-up if no dial tone is present after 16 seconds

9.12 Maximum Dialing Attempts

Section [081]

001 to 016 attempts, Default = 8 attempts

The value programmed in section [081] determines how many times the control panel will re-dial the same monitoring station telephone number before proceeding to the next number.

9.13 Delay Between Dialing Attempts

Section [082]

000 to 255 seconds, Default = 20 seconds

This delay determines the amount of time the control panel will wait between each dialing attempt.

9.14 Alternate Dial Option

Section [136]: Dialer Options

Option [4] OFF = Alternate Dial Disabled (default)

Option [4] ON = Alternate Dial Enabled

With option [4] OFF, the control panel will dial the backup telephone number programmed in section [153] after all attempts to one monitoring station telephone number have failed (see *Maximum Dialing Attempts* on page 33). With option [4] ON, the control panel will dial the backup telephone number after every failed attempt.

9.15 Recent Close Delay

Section [085]

000 to 255 seconds, Default = no delay

If after having armed the system, an alarm is generated within the period defined by the Recent Close Delay, the control panel will attempt to transmit the Recent Close report code programmed in section [195].

9.16 Auto Test Report

Sections [087]

000 = Disabled, 001 to 255 days, Default = Disabled

Section [110]: Time (HH:MM)

The control panel will transmit the Test Report report code programmed into section [211] after the number of days programmed into section [087] has elapsed at the time programmed into section [110]. Use the 24-hour clock to program the time (i.e. 6:30PM = 18:30). The first Test Report will be transmitted within 24 hours after the feature is enabled at the time programmed in [110].

Example: Section [087] = 005 and section [110] = 13:00. The first Test Report will be sent at 1 PM that day and then the report will be sent every 5 days at 1 PM.

9.17 Closing Delinquency Timer

Section [095]

000 = Disabled, 001 to 255 days, Default = Disabled

At midnight every day, the control panel will verify when the partition was last disarmed. If the partition has not been armed within the time programmed in the Closing Delinquency Timer, the control panel will transmit a Closing Delinquency event to the monitoring station.

Example: The Closing Delinquency Timer for partition 1 in section [095] is programmed for 005 days. Spectra verifies when partition 1 was last disarmed at midnight every day. If partition 1 was not armed within the last 5 days, Spectra will transmit a Closing Delinquency event to the monitoring station.



The Closing Delinquency Event and timer apply only to partition 1.

9.18 Power Failure Report Delay

Section [086]

001 to 255 minutes, Default = 15 minutes

The control panel will transmit the AC Failure report code programmed in section [205] after the Power Failure Report Delay period has elapsed.

9.19 Disarm Reporting Options

Section [131]: Arming /Disarming Options

Option [1] OFF = Always Report Disarming

Option [1] ON = Report Disarming Only After Alarm (default)

With option [1] OFF, the control panel will send the Disarming report codes (see page 28) to the monitoring station every time the system is disarmed. With option [1] ON, the control panel will send the Disarming report codes to the monitoring station when the system is disarmed following an alarm.

9.20 Zone Restore Report Options

Section [132]: Zone Options

Option [6] OFF = Report On Bell Cut-Off (default)

Option [6] ON = Report On Zone Closure

With option [6] OFF, the 1759MG will send the Zone Alarm Restore report codes (see page 29) to the monitoring station when the zone has returned to normal and the Bell Cut-Off Timer has elapsed (see page 25). With option [6] ON, the 1759MG will send the Zone Alarm Restore report codes to the monitoring station as soon as the zone returns to normal or when the system is disarmed.

9.21 Telephone Line Monitoring (TLM)

When enabled, the system verifies the existence of a telephone line once every second. A line test failure occurs when the TLM detects less than 3 volts for the period defined by the TLM Fail Timer. If the line test fails, the control panel's STATUS LED flashes and generates one or more conditions as defined by the TLM settings below. These will be restored when the control panel detects the telephone line again. Please note that when the dialer detects an incoming call, the TLM test will stop for 1 minute.

Section [135]: Dialer Options

[1] OFF / [2] OFF: *TLM Disabled*

[1] OFF / [2] ON: *Trouble Only*

Upon line test failure, a TLM Trouble will appear in the keypad's *Trouble Display* (see page 42).

[1] ON / [2] OFF: *Alarm If System Armed*

Upon line test failure, a TLM Trouble will appear in the keypad's *Trouble Display* (see page 42) and if the system is armed, the control panel will generate an alarm.

[1] ON / [2] ON: *Silent Alarm Becomes Audible*

Upon line test failure, a TLM Trouble will appear in the keypad's *Trouble Display* (see page 42) and causes a silent zone or silent panic alarm to switch to audible.

9.21.1 TLM Fail Timer

Section [079]

016 to 255 x 2 seconds, Default = 32 seconds

If TLM does not detect the existence of a telephone line for the duration of this period, the control panel will generate the condition(s) defined by the TLM options (see above).

Part 10: Programmable Outputs

A PGM is a programmable output that toggles to its opposite state (i.e. a normally open PGM will close) when a specific event has occurred in the system. For example, a PGM can be used to reset smoke detectors, activate bells or strobe lights, open/close garage doors and much more. When a PGM closes, the control panel supplies a ground to the PGM activating any device or relay connected to it. When a PGM opens, the circuit opens from ground, therefore, cutting power to any devices connected to it.

PGM1

A programmable output that provides up to 150mA. Refer to *Alarm Relay and PGMs* on page 4.

PGM2

PGM2 is a programmable output that can provide up to 1A. PGM2 is designed to be used as a Strobe Output. For information refer to *PGM Strobe Options* on page 35. For connections, refer to *Alarm Relay and PGMs* on page 4.

Global PGM

The Global PGM allows you to use the control panel's PGM Event List to activate PGMs located on a module or LCD keypad. For example, if you enable a module's "Follows Global PGM" option, the PGM on the module will activate whenever the event programmed in section [124] occurs. Every PGM on every keypad and/or expansion bus module can be programmed to follow the event(s) defined by the Global PGM.

10.1 PGM Activation Event

Sections [120], [122], and [124]

This feature allows you to program the control panel to activate a PGM when a specific event occurs in the system. The PGM will remain in its active state until the programmed PGM Deactivation Event occurs or when the PGM Delay period elapses (see page 35). For the Event List see the PGM Table in the *Spectra 1759MG Programming Guide*. To program a PGM Activation Event:

- 1) Enter section that represents the desired PGM. PGM1 = [120], PGM2 = [122], Global PGM = [124]
- 2) Enter the **Event Group #**.
- 3) Enter the **Sub-Group #**.
- 4) Enter the **Partition #** (01 = Partition 1 02 = Partition 2 99 = Both Partitions)



The “AC Loss” PGM Event will only occur after the Power Failure Report Delay elapses (see page 33).

10.2 PGM Deactivation Event

Sections [121], [123], [125]

After PGM activation, the PGM will return to its normal state (deactivate) when the programmed PGM Deactivation Event occurs. Instead of deactivating the PGM when a specific event occurs, the PGM can deactivate after a programmed period elapses (see *PGM Delay* below). For the Event List see the PGM Table in the *Spectra 1759MG Programming Guide*. **If using the PGM Delay, these sections can be used as a second activation event.**

- 1) Enter section that represents the desired PGM. PGM1 = [121], PGM2 = [123], Global PGM = [125]
- 2) Enter the **Event Group #**.
- 3) Enter the **Sub-Group #**.
- 4) Enter the **Partition #** (01 = Partition 1 02 = Partition 2 99 = Both Partitions)

10.3 PGM Delay

Section [066] = PGM1, [067] = PGM2, [068] = Global PGM
001 to 255 seconds, 000 = Follows Deactivation Event, Default = 5 seconds

Instead of deactivating the PGM on the occurrence of a specific event, the PGM will deactivate after the period programmed here has elapsed.



If a PGM Delay is programmed, the deactivation event can be used as a second activation event.

10.4 PGM Normal State

Section [126]: Options [4], [5] and [6]

A PGM switches to its opposite state (i.e. a normally open PGM will close) when a specific event has occurred in the system. You can program each PGM output to be normally open (N.O.) or normally closed (N.C.) by enabling or disabling options [4], [5] and [6] in section [126].

- Option [4] OFF = PGM1 Normally Open (Default)
- Option [4] ON = PGM1 Normally Closed
- Option [5] OFF = PGM2 Normally Open (Default)
- Option [5] ON = PGM2 Normally Closed
- Option [6] OFF = Global PGM Normally Open (Default)
- Option [6] ON = Global PGM Normally Closed

10.5 PGM2 Strobe Options

Section [129]: General Options

- Option [1] OFF = PGM2 Output is Steady (Default)
- Option [1] ON = PGM2 Output is Pulsed (Strobe)

With option [1] enabled, PGM2 will flash on and off whenever activated. Otherwise, it will provide a steady output.

- Option [2] OFF = Disable PGM2 Pulse When System is Armed (Default)
- Option [2] ON = Enable PGM2 Pulse When System is Armed

Whenever the system is armed, PGM2 will flash once every 30 seconds until the system is disarmed.

- Option [3] OFF = Disable PGM2 Pulse on Arm/Disarm (Default)
- Option [3] ON = Enable PGM2 Pulse on Arm/Disarm Enabled

With this option enabled, PGM2 will flash once to indicate the system has been armed and will flash twice to indicate that the system has been disarmed.

10.6 Alarm Relay Options

Section [127]: General Options

- Option [7] OFF = Alarm Relay Follows Bell Output (Default)
- Option [7] ON = Alarm Relay Follows Global PGM

With this option off, the optional Alarm Relay will activate or deactivate whenever the Bell Output activates or deactivates. With the option on, the Alarm Relay will activate or deactivate whenever Global PGM activates or deactivates.

Part 11: System Settings

11.1 Hardware Reset

Performing a hardware reset will set all control panel settings to factory default except for the Panel ID and PC Password. Also, the event buffer will **not** be erased. To perform a power down reset:

- 1) Make sure the Installer Lock is disabled (see below)
- 2) Remove battery and AC power from the control panel.
- 3) Set the RESET jumper to on by placing a jumper on the RESET pins of the control panel.
- 4) Re-connect AC and battery power to the control panel.
- 5) Wait 10 seconds and remove the jumper.

11.2 Installer Lock

Section [282]

000 = Disabled, 147 = Lock Enabled, Default = Disabled

Program 147 into section [282] to lock all programming. Performing a hardware reset will not affect the current panel settings. To remove the Installer Lock, enter 000. Please note that four seconds after resetting the control panel the STATUS LED on the control panel will flash fast for 5 seconds to indicate that the installer lock is enabled.

11.3 Keypad Lockout Feature

Sections [092] and [093]

If a consecutive number of invalid codes are entered into a keypad, the control panel can be set to deny access from all keypads for a specified period and send the report code programmed in section [196]. Program the number of consecutive invalid codes from 001 to 255 (000 = disabled) into section [092]. Program the duration of the Keypad Lockout from 001 to 255 minutes into section [093]. If 000 is programmed in section [093], the keypads will not be locked-out, but the report code programmed in section [196] will be sent.

11.4 Battery Charge Current

Section [127]: General Options

Option [5] OFF = Battery Charge Current: 350mA (default)

Option [5] ON = Battery Charge Current: 700mA (40VA transformer required)

11.5 Partitioning

Section [127]: General Options

Option [1] OFF = Partitioning Disabled (default)

Option [1] ON = Partitioning Enabled

The 1759MG is equipped with a partitioning feature which can divide the alarm system into two distinct areas identified as Partition 1 and Partition 2. Partitioning can be used in installations where shared security systems are more practical, such as an office/warehouse building. When partitioned, each zone, each user code (see *User Code Options* on page 10) and some of the system's features can be assigned to Partition 1, Partition 2 or both (see *Zone Partition Assignment* on page 15). **If the system is not partitioned, all user codes and features will be recognized as belonging to Partition 1.**

- Users can only arm partitions to which they have been assigned.
- Only zones assigned to Partition 1 will arm/disarm when Partition 1 is armed or disarmed.
- Only zones assigned to Partition 2 will arm/disarm when Partition 2 is armed or disarmed.
- Zones assigned to both partitions will arm when both partitions are armed and will disarm when at least one disarms.
- The following features can be programmed separately for each partition: Entry/Exit Delay Timer, Auto-arming Options, Bell Cut-Off Timer, Switch to Stay arming, PGM Events and Account Numbers.



If the system is not partitioned, all zones, user codes, and features will be recognized as belonging to partition 1. Zones that have been manually assigned to partition 2 will no longer function.

11.6 System Real-Time Clock

Section [280]

Program the current time into section [280] using the 24-hour clock (i.e. 8:30PM = 20:30).

11.7 Clock Adjust

Section [088]

000 = Disabled, 001 to 255, Default = Disabled

001 to 127 = + 1 to +127 seconds

128 to 255 = -1 to -127 seconds

If you notice a gain or loss in control panel time, calculate the average gain or loss per day and program the opposite amount in order to automatically correct the time setting every 24 hours.

Example: If a control panel loses 4 minutes per month, this represents an average loss of 8 seconds per day. Therefore, programming 008 (plus 8 seconds) into section **[088]** would compensate for the 8-second loss.

11.8 Keypad Tamper Supervision

Section **[128]**: General Options

Option **[7]** OFF = Keypad 1 Tamper Supervision Disabled (default)

Option **[7]** ON = Keypad 1 Tamper Supervision Enabled

Option **[8]** OFF = Keypad 2 Tamper Supervision Disabled (default)

Option **[8]** ON = Keypad 2 Tamper Supervision Enabled

The control panel can be programmed to monitor the on-board tamper status of one or two keypads in the system. If Keypad 1 Tamper Supervision is enabled, the control panel will verify the tamper status of a keypad with its keypad zone set as Keypad Zone 1. If Keypad 2 Tamper Supervision is enabled, the control panel will verify the tamper status of the keypad with its keypad zone set as Keypad Zone 2. Ensure that the keypad's on-board anti-tamper switch is enabled. For LED keypads, see *Configuring The LED Keypad* on page 8. For LCD keypads, see the appropriate Installation Guide.



Regardless of whether the keypad zones are being used or not, if more than one keypad is set with the same keypad zone number, Keypad Tamper Supervision will be lost for that keypad zone. For example, if two keypads in your system have their keypad zones defined as Keypad Zone 1, the control panel will not recognize a Keypad 1 Tamper Supervision Failure.

If a keypad tamper occurs, the control panel can transmit the appropriate Zone Tamper report code (see page 29) as originating from the zones specified by the Table 10. If the zone (as specified by Table 10) is enabled, the control panel will report the tamper as originating from the partition where the zone is assigned. If the zone is not enabled, the control panel will send the Zone Tamper report code as originating from partition 1. A Tamper/Zone Wiring Failure will also appear in the keypad's trouble display (see page 42).

Table 10: Zone Tamper Report Code for Keypad Tamper Supervision Failure

| Keypad Tamper | 1759MG |
|-------------------------------|--------|
| Keypad 1 Tamper Supervision = | Zone 6 |
| Keypad 2 Tamper Supervision = | Zone 7 |



When Reassign Keypad Zone 2 is enabled (see page 12), the Keypad Tamper Supervision for Keypad Zone 2 is lost. Therefore, Keypad Tamper Supervision will ONLY function on Keypad Zone 1.

11.9 Keypad Audible Trouble Warning

Section **[127]**: General Options

Option **[3]** OFF = Keypad Beep on Trouble Disabled

Option **[3]** ON = Keypad Beep on Trouble Enabled (default)

When enabled, the keypads emit an intermittent beep tone whenever a trouble condition occurs in the system. The intermittent beep tone remains activated until the user enters the trouble display by pressing the **[TBL]** or **[TRBL]** key. The intermittent beeps will re-initialize whenever a new trouble occurs or the trouble restores and re-occurs.

11.10 Confidential Mode

Section **[126]** Options **[1]**, **[2]** and **[3]**

Option **[1]** OFF = Confidential Mode Disabled (default)

Option **[1]** ON = Confidential Mode Enabled

Option **[2]** OFF = Keypads activate when an access code is entered

Option **[2]** ON = Keypads activate when a key is pressed (default)

Option **[3]** OFF = Confidential Mode Timer is 2 minutes

Option **[3]** ON = Confidential Mode Timer is 5 seconds (default)

If Confidential Mode is enabled and no actions are performed on the keypads for the time defined by the Confidential Mode Timer, all the keypad's LEDs will be off and LCD screens will show "Paradox Family" until either a key is pressed or an access code is entered. When the system exits Confidential Mode, the keypads will display the system's status. Confidential Mode is activated by enabling option **[1]**. Option **[2]** regulates whether the keypads will be activated at the touch of a key or only when an access code is entered. Option **[3]** determines the amount of time without action before the system enters Confidential Mode (5 seconds or 2 minutes).

11.11 Installer Quick Functions Keys

After entering the Installer Code, you can press a key to perform specific actions as described below.

11.11.1 Installer Test Mode

[ENTER] + [INSTALLER CODE] + [TBL] / [TRBL]

The Installer Test Mode allows you to perform walk tests where the bell or siren will squawk and the keypad will emit a confirmation beep to indicate opened zones. To enter this mode, simply enter the Installer Code then press the [TBL] or [TRBL] key. The keypad will emit a confirmation beep. To disable this mode, press the [TBL] key again. The keypad will emit a rejection beep.

11.11.2 Test Report

[ENTER] + [INSTALLER CODE] + [MEM]

Sends the Test Report report code programmed in section [211] to the monitoring station (see *Reporting and Dialer settings* on page 27).

11.11.3 Call WinLoad Software

[ENTER] + [INSTALLER CODE] + [BYP]

Refer to page 40.

11.11.4 Cancel Communication

[ENTER] + [INSTALLER CODE] + [STAY]

Cancels all communication until the next reportable event.

11.11.5 Answer WinLoad Software

[ENTER] + [INSTALLER CODE] + [FORCE]

Refer to page 41.

11.12 PGM Modules Supervision

Section [129]: General Options

Option [7] OFF = 4-PGM Output Module Supervision Disabled (default)

Option [7] ON = 4-PGM Output Module Supervision Enabled

By enabling this option, the control panel will supervise the 4-PGM Output Module (APR3-PGM4) connected to the Spectra bus. This means that whenever the module is disconnected or is not communicating with the control panel, the control panel will attempt to transmit the Module Fault report code programmed in section [210] and the Module Loss Failure will appear in the keypad's trouble display (see page 42).



Modules with the APR- prefix are compatible with Spectra (versions 2.0 and higher) and DGP-848. Modules with the APR3- prefix are compatible with Spectra (versions 2.0 and higher), DGP-848 and DGP-NE96.

11.13 Printer Module Supervision

Section [129]: General Options

Option [8] OFF = Printer Module Supervision Disabled (default)

Option [8] ON = Printer Module Supervision Enabled

By enabling this option, the control panel will supervise the Printer Module (APR3-PRT1) connected to the Spectra bus. This means that whenever the Printer Module is disconnected or is not communicating with the control panel, the control panel will attempt to transmit the Module Fault report code programmed in section [210] and the Module Loss Failure will appear in the keypad's trouble display (see page 42).



Modules with the APR- prefix are compatible with Spectra (versions 2.0 and higher) and DGP-848. Modules with the APR3- prefix are compatible with Spectra (versions 2.0 and higher), DGP-848 and DGP-NE96.

11.14 Zone Expansion Bus Module Supervision

Section [129]: General Options

Option [4] OFF = Zone Expansion Bus Module Supervision Disabled (default)

Option [4] ON = Zone Expansion Bus Module Supervision Enabled

By enabling this option, the control panel will supervise the 4- or 8-Zone Expansion Bus Module (SPC/APR3-ZX4 or SPC/APR3-ZX8) connected to the Spectra bus. This means that whenever the Zone Expansion Bus Module is disconnected or is not communicating with the control panel, the control panel will attempt to transmit the Module Fault report code programmed in section [210] and the Module Loss Failure will appear in the keypad's trouble display (see page 42).



Modules with the APR- prefix are compatible with Spectra (versions 2.0 and higher) and DGP-848. Modules with the APR3- prefix are compatible with Spectra (versions 2.0 and higher), DGP-848 and DGP-NE96.

11.15 Wireless Transmitter Low Battery Supervision

Section [129]: General Options

Option [6] OFF = Wireless Transmitter Low Battery Supervision Disabled (default)

Option [6] ON = Wireless Transmitter Low Battery Supervision Enabled

When option [6] in section [129] is enabled and the battery voltage of an Magellan wireless transmitter (motion detector or contact switch) has dropped below recommended limits, the control panel will attempt to transmit the Wireless Transmitter Low Battery report code programmed in section [210] and the Wireless Transmitter Low Battery Failure will appear in the keypad's trouble display (see page 42).

11.16 Wireless Transmitter Supervision Options

Section [132]: Zone Options

[7] OFF / [8] OFF: *Supervision Failure Recognition Disabled (default)*

When a tamper occurs on an Magellan wireless transmitter zone **in a disarmed system**, the control panel will display the zone as open in the keypad display, but will not generate an alarm. When it occurs on **in an armed system**, the control panel will follow the zone's Alarm Types setting (see page 16). This option is not permitted on UL systems.

[7] OFF / [8] ON: *Trouble Only*

When a tamper occurs on an Magellan wireless transmitter zone **in a disarmed system**, a Wireless Transmitter Supervision Loss will appear in the keypad's trouble display (see page 42) and the control panel will attempt to transmit the TX Supervision Loss report code programmed in section [213]. When it occurs on **in an armed system**, the control panel will follow the zone's Alarm Types setting (see page 16).

[7] ON / [8] OFF: *Silent Alarm*

When a tamper occurs on an Magellan wireless transmitter zone **in a disarmed system**, it functions the same as the Trouble Only setting, but it will also generate a silent alarm. A silent alarm will not trigger any bells or sirens, but the system will have to be disarmed. **In an armed system**, the control panel will follow the zone's Alarm Types setting (see page 16).

[7] ON / [8] ON: *Audible Alarm*

When a tamper occurs on an Magellan wireless transmitter zone **in a disarmed system**, it functions the same as the Trouble Only setting, except it will also generate an audible alarm. **In an armed system**, the control panel will follow the zone's Alarm Types setting (see page 16).

11.16.1 Restrict Arming on Supervision Loss

Section [131]: Arming/Disarming Options

Option [6] OFF = Disabled (default)

Option [6] ON = Restrict Arming on Wireless Transmitter Supervision Loss

The control panel will not allow users to arm the system if it receives a Supervision Loss signal. Please note that the Wireless Transmitter Supervision Options (see page 39) must be enabled. The control panel will not arm any partition until all Supervision Loss trouble conditions are rectified.

11.16.2 Supervision Bypass Options

Section [131]: Arming/Disarming Options

Option [7] OFF = Generate Supervision Loss if detected on a Bypassed Wireless Transmitter Zone (default)

Option [7] ON = No Supervision Loss if Detected on a Bypassed Wireless Transmitter Zone

When this feature is enabled, the Wireless Transmitter Supervision Options will follow the zone's bypass definition. This means the control panel will not perform any action if a Supervision Loss occurs on a bypassed zone. When this feature is disabled, the Wireless Transmitter Supervision Options will ignore the bypass definition. This means the control panel will generate an incident as per Wireless Transmitter Supervision Options if a supervision loss occurs on a bypassed zone.

11.17 Reprogram All Expansion Modules

Section [750]

After removing an expansion bus module from the communication bus, the control panel keeps the module's programmed sections in memory. Therefore, if you add or replace a module or when you have downloaded the contents of the Paradox Memory Key (refer to *Programming Using A Paradox Memory Key** on page 9), you can reprogram the modules with the settings saved in the control panel. To do so, enter section [750] and press [ENTER]. The keypad will emit 2 beeps every second while downloading.

Part 12: Settings for WinLoad Software



WinLoad has not been verified by UL

12.1 Panel Answer Options

The following two options define how the control panel answers an incoming call from a computer using the WinLoad Software for Windows®.

12.1.1 Answering Machine Override

Section [077]

000 = Disabled, 010 to 255 seconds, Default = Disabled

When using the WinLoad software to communicate remotely with an installation site that uses an answering machine or service, the answering machine override must be programmed. Using the WinLoad software you will call the control panel, hang up, then call back. If the installation site is called back within the programmed delay period, the control panel will override the answering machine or service by picking-up the line after the first ring on the second call. You must wait at least 10 seconds before attempting the second call, otherwise, the control panel will think it is the same call. For details on how to use the WinLoad software, refer to the WinLoad Help Manual.

***Example:** A security installation is using an answering machine set to answer after three rings. If section [077] has been programmed with 040 (40 seconds) and the second call is made within 40 seconds, the control panel will pick up the line on the first ring. If it takes more than 40 seconds, the control panel will not answer on the first ring and the answering machine will answer after three rings.*

12.1.2 Number of Rings

Section [078]

000 = disabled, 001 to 015 rings, Default = 8 rings

This value represents the number of rings the control panel will wait before picking-up the line. If the line is not answered after the number of programmed rings, the control panel will answer the call. You must wait at least 10 seconds before attempting the second call or the control panel will think it is the same call.

12.2 Panel Identifier

Section [141]

0000 to FFFF

This 4-digit code identifies the control panel to the WinLoad software before initiating communication. The control panel will verify that the Panel Identifier in the WinLoad software is the same. If the codes do not match, the control panel will not establish communication. Therefore, be sure to program the same panel identifier into both the Spectra control panel and the WinLoad software.

12.3 PC Password

Section [142]

0000 to FFFF

This 4-digit password identifies the PC to the panel before establishing communication. Program the same PC Password into both the Spectra control panel and the WinLoad software. If the passwords do not match, the WinLoad software will not establish communication.

12.4 PC Telephone Number

Section [150]

Up to 32 digits

The control panel will dial this number when trying to initiate communication with a computer using the WinLoad software. You can enter any digit from 0 to 9 and any special keys or functions (see Table 8 on page 30) up to a maximum of 32 digits.

12.5 Call WinLoad Software

[ENTER] + [INSTALLER CODE] + [BYP]

The control panel will dial the PC Telephone Number programmed in section [150] in order to communicate with the WinLoad software. The control panel and the WinLoad software will verify that the Panel Identifier and the PC Password match before establishing communication.

12.6 Answer WinLoad Software

[ENTER] + [INSTALLER CODE] + [FORCE]

In order to perform on-site upload/download connect your computer directly to the control panel using an ADP-1 line adapter. In the WinLoad software set Dialing Method to Blind Dial. Program the panel telephone number in WinLoad software and follow the instructions on the ADP-1 adapter. When the computer has dialed, press [ENTER] followed by the Installer Code, then press the [FORCE] key to manually answer the WinLoad software from the control panel.

12.7 Auto Event Buffer Transmission

Section [136]: Dialer Options

Option [2] OFF = Auto Event Buffer Transmission Disabled (default)

Option [2] ON = Auto Event Buffer Transmission Enabled

When the event buffer reaches 50% capacity, the control panel will make two attempts to establish communication with a PC using the WinLoad software by calling the PC Telephone Number programmed in section [150]. The WinLoad software must be in Wait to Dial mode. When the system establishes communication, it will upload the contents of the event buffer to the WinLoad software. If communication is interrupted before completing transmission or if after two attempts communication is not established, the system will wait until the Event Buffer attains another 50% capacity before attempting to re-communicate with the monitoring station. When the Event Buffer is full, each subsequent new event will erase the oldest event in the buffer.

12.8 Call Back WinLoad

Section [136]: Dialer Options

Option [1] OFF = Call Back WinLoad Disabled (default)

Option [1] ON = Call Back WinLoad Enabled

For additional security, when a PC using the WinLoad software attempts to communicate with the control panel, the control panel can hang up and call the PC back in order to re-verify identification codes and re-establish communication. When the control panel hangs up, the WinLoad software automatically goes into Wait for Call mode, ready to answer when the control panel calls back. Please note that the PC Telephone Number must be programmed in section [150] in order to use the Call Back feature.

Part 13: User Operation

13.1 Trouble Display

The Spectra system continuously monitors fourteen possible trouble conditions. When a trouble condition occurs, the **[TBL]** key or **[TRBL]** indicator will illuminate on the LED keypads or “Trouble” will appear on the LCD keypad’s screen. Press the **[TBL]** or **[TRBL]** key to switch to the trouble display. The **[TBL]** key or **[TRBL]** indicator will flash and lights corresponding to an existing trouble condition will illuminate on the LED keypads (see Table 11) or the appropriate trouble message will appear on the LCD keypad. Press the **[CLEAR]** key to exit the trouble display.

Please note that the keypad can be programmed to emit a BEEP every 5 seconds whenever a new trouble condition has occurred. Pressing the **[TBL]** or **[TRBL]** key will stop the beeping.

Table 11: Trouble List

| LED # | Description | Details |
|------------------------------|----------------------------------|--|
| [1] | No/Low Battery Failure | The control panel performs a dynamic battery test under load every 60 seconds. This trouble indicates that the back up battery is disconnected or that the battery should be replaced, as it will not provide adequate current in case of AC loss. This trouble will also appear when the control panel is running on battery power and the battery voltage has dropped to 10.5V or lower. This means the battery must be recharged or replaced. |
| [2] | Wireless Transmitter Low Battery | The battery voltage of an Magellan wireless transmitter has dropped below recommended limits. To determine the zones generating the trouble, examine the Low Battery LED indicators on all the transmitters. The batteries should be replaced. |
| [3] | Power Failure | Upon power failure, the AC LED on all keypads will turn off. The control panel can transmit the report code programmed in section [205] . This report code can be delayed by programming a Power Failure Report Delay in section [086] . The AC LED turns back on as soon as power is restored. |
| [4] | Bell Disconnected | This trouble occurs when a bell or siren is not connected to the bell output terminals. If you are not using the BELL terminals, connect a 1K Ω resistor across the bell output. |
| [5] | Maximum Bell Current | The BELL output uses a fuseless circuit and will automatically shut down if the current exceeds 3A. After opening the short or reducing the load, the bell current is restored upon the following alarm generation. This trouble indicator will only appear when a condition has occurred that would activate the bell output (e.g. during an alarm). |
| [6] | Maximum Auxiliary Current | The auxiliary output uses a fuseless circuit to protect the power supply against current overload and automatically shuts down if the current exceeds 1.1A. After opening the short or reducing the load, the panel will restore power to the auxiliary output. |
| [7] | Communicator Report Fail | The control panel has failed all attempts to communicate with the central monitoring station. |
| [8] | Timer Loss | The control panel’s internal clock must be re-programmed. To re-program the timer press the [8] key followed by the current time using the 24-hour clock (i.e. 8:30PM = 20:30). |
| [9] | Tamper/Zone Wiring Fail | If the Tamper Recognition options are enabled (see page 25), this trouble indicates a wiring problem on one or more zones or that the cover has been removed on one or more wireless transmitters. To provide line short recognition the zone connections must have EOL resistors. If you press the [9] key, the keypad will display which zones are in trouble. Enter the Installer Code to clear Tamper troubles. |
| [10] | Telephone Line Monitoring | If the Telephone Line Monitoring (TLM) feature is enabled (see section [135]), this trouble indicates that the control panel has not detected the presence of a telephone line for 30 seconds. |
| [STAY] or [11] | Fire Loop Trouble | Indicates a wiring problem on a fire zone. Press [STAY] to view the zones that are generating this trouble. |

Table 11: Trouble List

| LED # | Description | Details |
|--------------------|---------------------------------------|--|
| [FORCE] or [16] | Keypad Fault | If the keypad is no longer communicating with the control panel, the [TBL] or [TRBL] will flash, the [FORCE] key will illuminate (the LCD keypad displays "Keypad Fault") and the keypad will emit four consecutive beeps at 5-second intervals. Press any key on the keypad to terminate the "beeping" sequence. When communication has been restored, the system will revert to previous status. |
| [BYP] or [12] | Module Loss | A bus module is no longer communicating with the control panel. The module's supervision option must be enabled in section [129]. |
| [MEM] or [13] | Wireless Transmitter Supervision Loss | One or more wireless transmitters are no longer communicating with the receiver. If you press the [MEM] key, the keypad will display which zones are in trouble. |

13.2 Programming Access Codes

Access codes are personal identification numbers that allow you to enter certain programming modes, arm or disarm your system as well as activate or deactivate PGMs. The Spectra security system supports the following:

System Master Code arms or disarm partitions using any arming method and can create, modify or delete any user access code. Only the System Master Code can modify or delete user access codes assigned to both partitions.

Master Code 1 is permanently assigned to partition 1 and can be used to create, modify or delete user access codes that are assigned to partition 1.

Master Code 2 is permanently assigned to partition 2 (except when partitioning is disabled, Master Code 2 will be assigned to partition 1) and can be used to create, modify or delete user access codes that are assigned to the same partition.

45 User Access Codes (including 1 Duress code)

How Do I Program Access Codes?

- 1) Press [ENTER].
- 2) Key in the [SYSTEM MASTER CODE] or [MASTER CODE].
- 3) Key in 3-digit [SECTION] (see Table below).
- 4) Key in new 4- or 6-digit [ACCESS CODE].
[ENTER] flashes. Return to step 3.

How Do I Delete Access Codes?

- 1) Repeat steps 1 to 3 (see above).
- 2) Press the [FORCE] key once for each digit in the access code (4 or 6 times) until the keypad emits a confirmation beep.

| Section | User Codes |
|----------------|------------------------------------|
| [001] | User Code 001 = System Master Code |
| [002] | User Code 002 = Master Code 1 |
| [003] | User Code 003 = Master Code 2 |
| [004] to [047] | User Code 004 to User Code 047 |
| [048] | User Code 048 or Duress Code |

13.3 Disarming & Deactivating an Alarm

To disarm an already armed system or to deactivate an alarm, simply key in a valid access code. Program a designated entry/exit point, such as the front door or the garage door with an entry delay timer. When these entry/exit point are opened (breached), it will set off a timer. The system will not generate an alarm until this timer elapses, giving users enough time to enter the premises and disarm the system. Any user can disarm the system, except users have been assigned the Arm Only Option.

How Do I Disarm the System or Deactivate an Alarm?

- 1) Key in your [ACCESS CODE]*.
The arm or alarm indication will turn off and the keypad will emit a confirmation beep.

*IF YOU HAVE ACCESS TO BOTH PARTITIONS:

Press the key corresponding to the partition you wish to *Disarm* or to *Disarm* both partitions, press the [1] key then after the confirmation beep press the [2] key.

13.4 Regular Arming

This method, commonly used for day-to-day arming, will arm all the zones in the selected partition. If you make a mistake, the keypad will emit a rejection beep. When you have correctly armed the system, the appropriate ARM indication will turn on and the exit delay will be initiated. Please note that Regular arming can also be activated through Auto-arming, Keyswitch arming or One-touch arming.

How Do I Regular Arm?

- 1) Green "READY" indicator must be illuminated. Unless the system is partitioned, in which case all zones in the desired partition must be closed.
- 2) Key in a valid [ACCESS CODE]*.

*IF YOU HAVE ACCESS TO BOTH PARTITIONS:

Press the key corresponding to the partition you wish to arm. To arm both partitions, press the [1] key then after the confirmation beep press the [2] key.

13.5 Stay Arming

This method allows users to remain in the protected area while partially arming the system. For example, when going to sleep at night, entry/exit points like doors and windows can be armed while other zones like motion detectors remain deactivated. Please note that fire zones cannot be bypassed.

How Do I Stay Arm?

- 1) All zones in the desired partition (except *Stay Zones*) must be closed.
- 2) Press the [STAY] key.
- 3) Key in a valid [ACCESS CODE]*.

*IF YOU HAVE ACCESS TO BOTH PARTITIONS:

Press the key corresponding to the partition you wish to Stay arm. To Stay arm both partitions, press the [1] key then after the confirmation beep press the [2] key.

If you make a mistake, the keypad will emit a rejection beep. When you have correctly Stay armed the system, the appropriate ARM or STAY indication appears and the exit delay is initiated. Stay arming can also be activated using Auto-arming, Keyswitch arming or One-touch arming. The user code must have the Stay Arming Option enabled.

13.6 Instant Arming

After Stay arming the system and **during its exit delay**, press and hold the [STAY] key for 3 seconds. You should hear a confirmation beep. This will switch all armed zones to Instant zones.

If you have access to both partitions:

To Instant arm one partition, press [STAY] + [ACCESS CODE] + Select Partition + [CLEAR] + press & hold [STAY]

To Instant arm both partitions, press [STAY] + [ACCESS CODE] + [1] + [2] + press & hold [STAY]

13.7 Force Arming (Not to be used with UL Installations)

Force arming allows users to rapidly arm the system, without having to wait for all zones in the system to be closed. Force arming is commonly used when a motion detector is protecting the area occupied by a keypad. Therefore, when arming the system, if the motion detector is set as a Force Zone, the control panel will ignore the zone and allow users to arm the system even if the zone is open. Any open Force Zones at the time of arming will be considered deactivated by the control panel. If during this period a deactivated zone is closed, the control panel will revert that zone to active status, hence, will generate an alarm if breached.

How Do I Force Arm?

- 1) All zones in the desired partition (except Force Zones) must be closed.
- 2) Press the [FORCE] key.
- 3) Key in a valid [ACCESS CODE]*.

*IF YOU HAVE ACCESS TO BOTH PARTITIONS:

Press the key corresponding to the partition you wish to Force arm. To arm both partitions, press the [1] key then after the confirmation beep press the [2] key.

If you make a mistake, the keypad will emit a rejection beep. When correctly Force armed, the appropriate arm indication appears and the exit delay will initiate. Please note that Force arming can also be activated using One-Touch Force arming. Also, note that the user access code must have the Force Arming Option enabled.

13.8 Manual Bypass Programming

Manual Bypass Programming allows users to program the alarm system to ignore (deactivate) specified zones the next time the system is armed. The access code must have the Bypass Programming Option enabled. Please note that fire zones cannot be bypassed. Manual Bypass Programming can also be activated using One-Touch Bypass Programming.

How do I Program Bypass Entries?

- 1) Press the **[BYP]** key.
- 2) Key in a valid **[ACCESS CODE]***.
- 3) Select one or more **[ZONES]** you wish to bypass.
- 4) Once you have entered the desired bypass entries, press the **[ENTER]** key to accept these entries.

***IF YOU HAVE ACCESS TO BOTH PARTITIONS:**

Press the key corresponding to the desired partition.

13.8.1 Bypass Recall Feature

After disarming the system, the control panel will erase the bypass entries. By using the Bypass Recall Feature, you can reinstate the previous bypass entries saved in memory. This eliminates the need to manually program the bypass entries every time you arm the system. The access code must have the Bypass Programming Option enabled.

How Do I Recall Bypass Entries?

- 1) Press the **[BYP]** key.
- 2) Key in your **[ACCESS CODE]***.
- 3) Press the **[BYP]** key. *Previously bypassed zones will illuminate.*
- 4) Press the **[ENTER]** key.

***IF YOU HAVE ACCESS TO BOTH PARTITIONS:**

Press the key corresponding to the desired partition.

13.9 One-Touch Arming

One-touch arming allows users to arm the system without using an access code. Simply press and hold a key. One-touch arming can be used to allow specific individuals like service personnel (i.e. cleaners, maintenance) to arm the system when leaving the protected area, without giving them access to any other alarm system operations.

One-Touch Regular Arming: Press and hold the **[ENTER]** key for 3 seconds* to arm all zones in the partition.

One-Touch Force Arming: Press and hold the **[FORCE]** key for 3 seconds* to bypass any open Force Zones.

One-Touch Bypass Programming: Press and hold the **[BYP]** key for 3 seconds* to access Bypass Programming Mode.

One-Touch Stay Arming: Press and hold the **[STAY]** key for 3 seconds* to arm all zones not defined as Stay Zones.

Fast Exit - When the system is already Stay armed:

- *To Exit and Stay Arm:* Press and hold the **[STAY]** key for 3 seconds*. The system will switch to exit delay. At the end of the exit delay period, the system will return to Stay arming.
- *To Exit and Regular Arm:* Press and hold the **[ENTER]** key for 3 seconds*. The system will switch to exit delay. At the end of the exit delay period, the control panel will switch to Regular arming.
- *To Exit and Force Arm:* Press and hold the **[FORCE]** key for 3 seconds*. The system will switch to exit delay. At the end of the exit delay period, the control panel will switch to Force arming.

* If you have access to both partitions after activating a one-touch feature, press the key corresponding to the desired partition. To select both partitions, press the **[1]** key then after the confirmation beep press the **[2]** key.

13.10 Keyswitch Arming

A keyswitch can be used to arm and disarm the system. Assign the keyswitch to a specific partition and program the keyswitch to Stay or Regular arm the assigned partition. Also program the keyswitch to function as a Maintained or Momentary keyswitch. To arm the system using a Maintained Keyswitch, set the keyswitch to the ON position. To disarm the system set the keyswitch to the OFF position. To arm the system using a Momentary Keyswitch, set the keyswitch to the ON position then turn it back to the OFF position. Repeating this sequence will disarm the system.

13.11 Panic Alarms

In case of emergency, the Spectra system provides up to three panic alarms. These panic alarms, if programmed, will immediately generate an alarm after pressing and holding two specific keys for two seconds, as described below.

Press and hold keys **[1]** and **[3]** for a panic alarm.

Press and hold keys **[4]** and **[6]** for a panic or medical alarm.

Press and hold keys **[7]** and **[9]** for a panic or fire alarm.

13.12 Auto-Arming (Not to be used with UL installations)

Each partition can be programmed to arm every day at the time specified by the Auto-arm Timer or for the period specified by the No Movement Timer. The user can program the Auto-arm Timer by using the System Master Code, Master Code 1 or Master

Code 2. Please note that the control panel will enter a 60-second exit delay period before arming the system. At this point, Auto-arming can be cancelled by entering a valid access code.

13.13 Alarm Memory Display

A record of all alarm situations that occur will be stored in memory. After disarming the system, pressing the **[MEM]** key will display which zones were in alarm during the alarm period. To exit the Alarm Memory Display, press the **[CLEAR]** key. The control panel will erase the contents of the alarm memory every time the system is armed.

13.14 Programming Chime Zones

Users can program which zones will be Chime Enabled. A Chime Enabled zone will cause the keypad to emit a rapid intermittent beep tone (BEEP-BEEP-BEEP-BEEP) advising the user every time it is opened. Each keypad must be Chime Programmed separately.

10-ZONE LED KEYPAD:

Press and hold any key from **[1]** to **[10]** for 3 seconds to activate or deactivate Chiming for zones 1 to 10. For example, press and hold the **[1]** key to enable chiming on zone 1. If after pressing and holding a key, the keypad emits a confirmation beep, this means the chime feature has been enabled for that zone. If the keypad emits a rejection beep, this means the chime feature has been disabled for the corresponding zone.

16-ZONE LED KEYPAD:

Press and hold the **[9]** key. Enter the 2-digit (01 to 15) zone number(s). When the corresponding LED is on, the zone is chimed. When the corresponding LED is off, the zone is unchimed. When the desired zones are chimed, press **[ENTER]**.

LCD KEYPAD:

Press and hold the **[9]** key. Enter the 2-digit (01 to 16) zone number(s), or use the arrow keys to scroll through the zones. and when the appropriate zone is displayed, press the **[FNC1]** key. When the desired zones are chimed, press **[ENTER]**.

13.15 Keypad Muting (Not to be used with UL installations)

Press and hold the **[CLEAR]** key for 3 seconds to enable or disable keypad muting. When muted, the keypad will only beep when a key is pressed or when the keypad emits a Rejection or confirmation beep. All other beep functions are disabled.

13.16 Keypad Backlight (1686H and 1686V only)

The illumination level behind the keys can be modified to suit the user's needs. There are four backlight levels. The **[MEM]** key is used to set the desired level. Each consecutive push of the **[MEM]** key will increase the backlight level until the maximum level is reached. After reaching the maximum level, the backlight level will return to the lowest level and the whole process is repeated. To change the backlight level:

How do I Modify The Backlight?

- 1) Press and hold the **[MEM]** key for 3 seconds.
- 2) The **[MEM]** key will illuminate.
- 3) Press the **[MEM]** key to set the desired backlight level.
- 4) Press **[CLEAR]** or **[ENTER]** to exit.

FCC Warnings

IMPORTANT INFORMATION

This equipment complies with Part 68 of the FCC rules subpart D and CS-03. Inside the cover of this equipment is a label that contains, among other information, the FCC registration number of this equipment.

NOTIFICATION TO TELEPHONE COMPANY

Upon request, customer shall notify telephone company of particular line to which the connection will be made, and provide the FCC registration number and the ringer equivalence of the protective circuit.

FCC REGISTRATION NUMBER:5A7CAN-22633 - AL - E
RINGER EQUIVALENCE NUMBER:0.1B (U.S. & CANADA)
USOC JACK: RJ31X (USA), CA31A (CANADA)

TELEPHONE CONNECTION REQUIREMENTS

Except for telephone company provided ringers, all connections to the telephone network shall be made through standard plugs and telephone company provided jacks, or equivalent, in such a manner as to allow for easy, immediate disconnection of terminal equipment. Standard jacks shall be so arranged that, if plug connected thereto is withdrawn, no interference to operation of equipment at customer's premises which remains connected to telephone network shall occur by reason of such withdrawal.

INCIDENCE OF HARM

Should terminal equipment/protective circuitry cause harm to telephone network, telephone company shall, where practicable, notify customer that temporary disconnection of service may be required; however, where prior notice is not practicable, the telephone company may temporarily discontinue service if action is deemed reasonable in circumstances. In case of temporary discontinuance, telephone company shall promptly notify customer and will be given opportunity to correct the situation.

CHANGES IN TELEPHONE COMPANY EQUIPMENT OR FACILITIES

The telephone company may make changes in its communication facilities, equipment operations or procedures, where such actions are reasonably required and proper in its business. Should any such changes render customer's terminal equipment incompatible with the telephone company facilities, the customer shall be given adequate notice to effect the modifications to maintain uninterrupted service.

GENERAL

This equipment shall not be used on coin telephone lines. Connection to party line service is subject to state tariffs.

RINGER EQUIVALENCE NUMBER (REN)

The ren is useful to determine the quantity of devices that you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, sum of the ren's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices that you may connect to your line, you may want to contact your local telephone company.

EQUIPMENT MAINTENANCE FACILITY

If you experience trouble with this telephone equipment, please contact facility indicated below for information on obtaining service or repairs. The telephone company may ask that you disconnect this equipment from network until problem is corrected or until you are sure that the equipment is not malfunctioning.

FCC PART 15, WARNINGS INFORMATION TO USER

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate

radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to equipment intermittently, the user is encouraged to try to correct the interference by one or more of the following measures: (1) re orient or relocate the receiving antenna; (2) increase the separation between the equipment and receiver; (3) connect the equipment to an outlet on a circuit other than the one to which the receiver is connected, or (4) consult the dealer or an experienced radio/tv technician for assistance.

CAUTION:

The user is cautioned that any changes or modifications not expressly approved by Paradox Security Systems could void the user's authority to operate/use the equipment.

WARRANTY

Paradox Security Systems Ltd. ("Seller") warrants its products to be free from defects in materials and workmanship under normal use for a period of one year. Except as specifically stated herein, all express or implied warranties whatsoever, statutory or otherwise, including without limitation, any implied warranty of merchantability and fitness for a particular purpose, are expressly excluded. Because Seller does not install or connect the products and because the products may be used in conjunction with products not manufactured by Seller, Seller cannot guarantee the performance of the security system and shall not be responsible for circumstances resulting from the product's inability to operate. Seller obligation and liability under this warranty is expressly limited to repairing or replacing, at Seller's option, any product not meeting the specifications. Returns must include proof of purchase and be within the warranty period. In no event shall the Seller be liable to the buyer or any other person for any loss or damages whether direct or indirect or consequential or incidental, including without limitation, any damages for lost profits stolen goods, or claims by any other party, caused by defective goods or otherwise arising from the improper, incorrect or otherwise faulty installation or use of the merchandise sold.

Notwithstanding the preceding paragraph, the Seller's maximum liability will be strictly limited to the purchase price of the defective product. Your use of this product signifies your acceptance of this warranty.

*BEWARE: Dealers, installers and/or others selling the product are not authorized to modify this warranty or make additional warranties that are binding on the Seller.

ATTACHMENT LIMITATION NOTICE

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all of the devices does not exceed 100.

Industry Canada certification is only applicable to installation of devices which include transformers approved by the Canadian Standards Association (CSA).

RESTRICTIONS CONCERNANT LE RACCORDEMENT DE MATÉRIEL

L'étiquette d'Industrie Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Le Ministère garantit toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. De plus, le matériel doit être installé en suivant une méthode acceptable de raccordement. L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêchent pas la dégradation du service dans certaines situations.

Les réparations de matériel homologué doivent être effectuées par un centre de service d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause d'un mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

AVERTISSEMENT: L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à une service d'inspection des installations électriques, ou à un électricien, selon le cas.

L'indice de charge (IC) assigné à chaque dispositif indique, pour éviter toute surcharge, le pourcentage de la charge totale qui peut être raccordé à un circuit téléphonique bouclé utilisé par ce dispositif. La terminaison du circuit bouclé peut être constituée de n'importe quelle combinaison de dispositifs, pourvu que la somme des indices de charge de l'ensemble des dispositifs ne dépasse pas 100.

La certification d'Industrie Canada s'applique seulement aux installations d'appareils utilisant un transformateur approuvé par l'Association Canadienne de Normalisation (CSA).

UL AND ULC WARNINGS

UL AND C-UL INSTALLATION NOTES

This equipment is UL listed in accordance with standard UL1023 (Household Burglar -- Alarm Systems Units), standard UL985 (Household Fire Warning Units) and standard UL1635 (Digital Alarm Communicator System Units). This equipment has the capability of being programmed with features not verified for use in UL installations. To stay within these standards, the installer should use the following guidelines when

configuring the system:

- All components of the system should be UL listed for the intended application.
- If the system will be used for "Fire" detection, the installer should refer to NFPA Standards #72, Chapter 2. In addition, once installation is complete, the local fire authority must be notified of the installation.
- This equipment must be verified by a qualified technician once every three years.
- All keypads must use an anti-tamper switch.
- Maximum allowed entry delay is 45 seconds.
- Maximum allowed exit delay is 60 seconds.
- Minimum 4 minutes for bell cut-off time.
- The following features do not comply with UL requirements: Bypass Recall and Auto Trouble Shutdown.
- Do not connect the primary indicating device to a relay. The installer must use the bell output.
- To comply with UL985, the auxiliary power output should not exceed 200mA. Please refer to Table 2: Current Consumption Table on page 4.
- Do not connect the zone ground terminal with UL Listed products.
- The metallic enclosure must be grounded to the cold water pipe.
- All outputs are Class 2 or power-limited, except for the battery terminal. The Class 2 and power-limited fire alarm circuits shall be installed using CL3, CL3R, CL3P, or substitute cable permitted by the National Electrical Code, ANSI/NFPA 70.

RECOMMENDED:

- EOL resistor part #2011002000
- **For UL Installations:** Basler Electric BE156240CAA007 16.5VAC min 40VA
- 12Vdc 4Ah rechargeable acid/lead or gel cell backup battery (YUASA model #NP7-12 recommended) for residential use. Use a 7Ah battery to comply with fire requirements.
- Wheelock 46T-12 siren

WARNING: This equipment must be installed and maintained by qualified service personnel only.

© 2002-2004 Paradox Security Systems Ltd. All rights reserved. Specifications may change without prior notice. One or more of the following US patents may apply: 6215399, 6111256, 5751803, 5721542, 5287111, 5119069, 5077549, 5920259 and 5886632. Canadian and international patents may also apply.

Spectra, WinLoad, InTouch and Digiplex are trademarks or registered trademarks of Paradox Security Systems Ltd. or its affiliates in Canada, the United States and/or other countries.

INDEX

| | |
|---|----|
| Numerics | |
| 24Hr. Buzzer Zone | 14 |
| 24Hr. Delayed Fire Zone | 15 |
| 24Hr. Standard Fire Zone | 15 |
| A | |
| AC Failure Report Code | 29 |
| AC Power | 2 |
| Access Codes | 10 |
| Length | 10 |
| Programming | 43 |
| Account Numbers | 30 |
| Ademco Contact ID | 31 |
| Ademco Contact ID Options | 31 |
| Ademco Express | 31 |
| Adjust Clock | 36 |
| Alarm Memory Display | 46 |
| Alarm Options | 25 |
| Alarm Relay | 4 |
| Options | 35 |
| Alarm Report Code Transmission, Delay | 17 |
| Alarm Types | 16 |
| Alternate Dial Option | 33 |
| Answer Upload/Download Software | 38 |
| Answer WinLoad Software | 41 |
| Answering Machine Override | 40 |
| Arming and Disarming Options | 22 |
| Arming Report Codes | 28 |
| Auto Event Buffer Transmission | 41 |
| Auto Force Arming | 23 |
| Auto Test Report | 33 |
| Auto Zone Shutdown | 16 |
| Counter | 16 |
| Report Code | 29 |
| Auto-Arming | |
| On No Movement | 23 |
| Options | 24 |
| Timer | 23 |
| Timing | 23 |
| Auxiliary Panic Report Code | 29 |
| Auxiliary Power | 4 |
| Auxiliary Supply Report Code | 29 |
| B | |
| Backlight, Keypad | 46 |
| Backup Battery | 2 |
| Battery Charge Current | 36 |
| Battery Failure Report Code | 29 |
| Battery, Backup | 2 |
| Beep On Exit Delay | 24 |
| Beep On Trouble | 37 |
| Bell Cut-Off Timer | 25 |
| Bell on Communication Failure | 32 |
| Bell Output | |
| Connection | 4 |
| Disconnected Report Code | 29 |
| Overload Report Code | 29 |
| Bell Squawk On Arm/Disarm | |
| With Keypad | 24 |
| With Remote Control | 24 |
| Burglary Zones, 24 Hr. | 14 |
| Buzzer Zone | 14 |
| Bypass Options, Supervision | 39 |
| Bypass Programming | 44 |
| Bypass Recall Feature | 45 |
| Bypass Zones | 16 |
| C | |
| Call Back Feature | 41 |
| Call Upload/Download Software | 38 |
| Call WinLoad Software | 40 |
| Cancel Auto-Arm Report Code | 28 |
| Cancel Communication | 38 |
| Charge Current | 36 |
| Check-in Supervision | 19 |
| Chime Zones | 46 |
| Clock Adjust | 36 |
| Closing Delinquency | 33 |
| Report Code | 28 |
| Cold Start Report Code | 30 |
| Configuring The LED Keypads | 8 |
| Connecting | |
| Bells or Sirens | 4 |
| Fire Zones | 6 |
| Keypad Zones | 5 |
| Keypads | 5 |
| Keyswitches | 6 |
| PGMs | 4 |
| Single Zone Inputs | 5 |
| Telephone Lines | 4 |
| Contact ID Options | 31 |
| Counter, Auto Zone Shutdown | 16 |
| Current Consumption Table | 4 |
| D | |
| Data Display Mode | 7 |
| Delay | |
| Before Alarm Report Code Transmission | 17 |
| Between Dialing Attempts | 33 |
| Dial Tone | 32 |
| Pager Report | 32 |
| Power Failure Report | 33 |
| Delayed Fire Zone | 15 |
| Dial Tone Delay | 32 |
| Dialer settings | 27 |
| Dialing Attempts | 33 |
| Dialing Method | 32 |
| Disarm Reporting Options | 33 |
| Disarming | 43 |
| Duress Code | 11 |
| Duress Report Code | 29 |

| | | | |
|---|----|---|--------|
| E | | Zone Connection | 5 |
| Emergency Panic Report Code | 29 | Keyswitch | |
| Entry Delay | 14 | Arming | 45 |
| EOL Zones | 17 | Arming, Report Code | 28 |
| Event Buffer Transmission | 41 | Connections | 6 |
| Event Call Direction | 32 | Disarming Report Code | 28 |
| Exclusive Zone Definitions | | Options | 17 |
| Delayed Fire Zone | 15 | Zone | 14 |
| Keyswitch Zone | 14 | L | |
| Standard 24Hr. Fire Zone | 15 | Late to Close Report Code | 28 |
| Exit Delay | 24 | Length of Access Codes | 10 |
| Expansion Input | 12 | Location and Mounting | 2 |
| F | | Lock Master Code | 11 |
| Fail to Communicate Report Code | 29 | Lock-out | 36 |
| Feature Select Programming Method | 7 | M | |
| Features, Wireless | 18 | Manual Bypass Programming | 44 |
| Fire Circuits | 6 | Maximum Dialing Attempts | 33 |
| Fire Loop Trouble Report Code | 29 | Memory Card | 9 |
| Fire Panic Report Code | 29 | Memory Display | 46 |
| Fire Zone | | Module Fault Report Code | 29 |
| Delayed | 15 | Mounting | 2 |
| Standard 24 Hr. | 15 | Multiple Feature Select Programming Method | 7 |
| Wireless | 15 | Muting | 46 |
| Follow Zones | 14 | N | |
| Force Arming | 44 | No Arming | |
| Force Zones | 17 | On Battery Fail | 23 |
| G | | On Supervision Loss | 39 |
| Global PGM | 34 | On Tamper Trouble | 23 |
| Ground | 2 | No Audible Feedback Upon Stay Arming | 25 |
| H | | No Exit Delay When Arming with Remote Control | 24 |
| Hardware Reset | 36 | No Movement Auto-Arming | 23 |
| I | | No Movement Report Code | 28 |
| Input Speed | 17 | Number of Rings | 40 |
| Installation | 2 | O | |
| Installer | | One-Touch Arming | 24, 45 |
| Code | 10 | Report Code | 28 |
| Lock | 36 | Options | |
| Quick Functions Keys | 38 | Alarm | 25 |
| Test Mode | 38 | Arming and Disarming | 22 |
| Installer In Report Code | 30 | Auto-Arming | 24 |
| Installer Out Report Code | 30 | Keyswitch | 17 |
| Instant Arming | 44 | User code | 10 |
| Intellizone | 16 | Zone | 16 |
| K | | Override Answering Machine | 40 |
| Key. See Memory Card | | P | |
| Keypad | | Pager | |
| Audible Trouble Warning | 37 | Delay | 32 |
| Backlight | 46 | Format Transmission Options | 31 |
| Installation | 5 | Reporting Format | 31 |
| Lockout Report Code | 29 | Panel Answer Options | 40 |
| Muting | 46 | Panel Identifier | 40 |
| Panic Options | 26 | Panic Alarms | 45 |
| Tamper Supervision | 37 | Panic Options | 26 |

| | | | |
|---|----|---|----|
| Partial Arming Report Code | 28 | Emergency Panic | 29 |
| Partition Account Numbers | 30 | Fire Panic | 29 |
| Partition Assignment, Zone | 15 | Keypad Lockout | 29 |
| Partitioning | 36 | Recent Closing | 29 |
| PC Exit Report Code | 30 | Report Code, Special Arming | |
| PC Password | 40 | Closing Delinquency | 28 |
| PC Telephone Number | 40 | Keyswitch Arming | 28 |
| PGM (Control Panel) | | Late to Close | 28 |
| Activation Event | 34 | No Movement | 28 |
| Deactivation Event | 35 | One-Touch Arming | 28 |
| PGM Delay | 35 | Partial Arming | 28 |
| Strobe Options | 35 | Remote Arming | 28 |
| PGM Activation, User Code Option | 11 | Timed Auto-Arming | 28 |
| Power | 2 | Report Code, Special Disarming | |
| Power Failure Report Delay | 33 | Cancel Auto-Arm | 28 |
| Printer Fault Report Code | 29 | Keyswitch Disarming | 28 |
| Programmable Output Connections | 4 | Remote Disarm | 28 |
| Programmable Outputs | 34 | Report Code, System Trouble | |
| Programming | | AC Failure | 29 |
| Access Codes | 43 | Auxiliary Supply | 29 |
| Chime Zones | 46 | Battery Failure | 29 |
| Methods | 7 | Bell Output Disconnected | 29 |
| Using a Keypad | 7 | Bell Output Overload | 29 |
| Wireless Features | 18 | Fail to Communicate | 29 |
| Wireless Fire Zone | 15 | Fire Loop Trouble | 29 |
| Pulse Ratio | 32 | Module Fault | 29 |
| | | Printer Fault | 29 |
| Q | | Timer Loss | 29 |
| Quick Arming | 24 | Wireless Low Battery | 29 |
| Quick Functions Keys (Installer) | 38 | Report Codes | 28 |
| | | Reporting and Dialer settings | 27 |
| R | | Reporting Formats | 30 |
| Real-Time Clock | 36 | Re-Program All Expansion Modules | 39 |
| Reassign Zones to Expansion Inputs | 13 | Reset, Hardware | 36 |
| Recall Bypass | 45 | Restrict Arming | |
| Recent Close Delay | 33 | On Battery Fail | 23 |
| Recent Closing Report Code | 29 | On Supervision Loss | 39 |
| Recycle Alarm | 25 | On Tamper Trouble | 23 |
| Regular Arming | 44 | Rings | 40 |
| Regular Arming Switches to Force Arming | 23 | | |
| Remote Arming Report Code | 28 | S | |
| Remote Controls | | Single Zone Inputs | 5 |
| Assigning to 1759EX | 20 | Software, Upload/Download | 7 |
| Assigning to User Access Codes | 21 | Special Alarm Report Codes | 29 |
| Deleting | 20 | Special Arming Report Codes | 28 |
| Programming | 20 | Special Disarming Report Codes | 28 |
| Programming Remote Control Buttons | 21 | Special Reporting Codes | 30 |
| Remote Disarm Report Code | 28 | Standard 24Hr. Fire Zone | 15 |
| Report Code, Special | | Stay | |
| Cold Start | 30 | Arming | 44 |
| Installer In | 30 | Delay | 22 |
| Installer Out | 30 | Zones | 16 |
| PC Exit | 30 | Strobe Options | 35 |
| Test Report | 30 | Supervision Bypass Options | 39 |
| Tx Supervision Loss | 30 | Supervision Options, Wireless Transmitter | 39 |
| Tx Supervision Restore | 30 | Switch to Stay Arming | 22 |
| Report Code, Special Alarm | | System | |
| Auto Zone Shutdown | 29 | Master Code | 10 |
| Auxiliary Panic | 29 | Real-Time Clock | 36 |
| Duress | 29 | Settings | 36 |
| | | Trouble Report Codes | 29 |

| | | | |
|---|--------|---|----|
| Trouble Restore Codes | 30 | Entry Delay 2 | 14 |
| | | Follow Zones | 14 |
| | | Instant Zones | 14 |
| T | | Zone Options | |
| Tamper Bypass Options | 26 | Alarm Types | 16 |
| Tamper Recognition | 25 | Auto Zone Shutdown | 16 |
| Telephone Line Connection | 4 | Delay Before Alarm Report Code Transmission | 17 |
| Telephone Line Monitoring (TLM) | 34 | Force Zones | 17 |
| Telephone Number, PC | 40 | Intellizone | 16 |
| Telephone Numbers | 30 | Keyswitch Options | 17 |
| Test Report | | Stay Zones | 16 |
| Automatic | 33 | Zone Partition Assignment | 15 |
| Manual | 38 | Zone Programming | 12 |
| Report Code | 30 | Zone Restore Report Options | 34 |
| Timed Auto-Arming | 23 | Zone Shutdown, Auto | 16 |
| Report Code | 28 | Zone Speed | 17 |
| Timer | 33 | Zone Tamper | |
| Timer Loss Report Code | 29 | Report Codes | 29 |
| Transformer Requirements | 2 | Restore Report Codes | 29 |
| Transmission Options, Pager Format | 31 | Zones Options | |
| Trouble Display | 42 | Bypass Zones | 16 |
| Tx Supervision | | | |
| Loss Report Code | 30 | | |
| Restore Report Code | 30 | | |
| | | | |
| U | | | |
| Upload/Download Software | 7 | | |
| User Code Options | | | |
| Arm Only | 11 | | |
| Bypass Programming | 11 | | |
| Force Arming | 11 | | |
| Partition 1 Assignment | 10 | | |
| Partition 2 Assignment | 11 | | |
| PGM Activation | 11 | | |
| Stay Arming | 11 | | |
| User Operation | 42 | | |
| | | | |
| W | | | |
| Winload Software | 7 | | |
| Wireless Features | 18 | | |
| Wireless Fire Zone Programming | 15 | | |
| Wireless Low Battery Report Code | 29 | | |
| Wireless Transmitters | | | |
| Assigning | 18 | | |
| Check-in Supervision | 19 | | |
| Check-in Supervision Timer Settings | 20 | | |
| Deleting | 18 | | |
| Low Battery Supervision | 20, 39 | | |
| Programming | 18 | | |
| Serial Number Display | 19 | | |
| Supervision Options | 39 | | |
| Viewing Signal Strength | 19 | | |
| | | | |
| Z | | | |
| Zone Alarm Report Codes | 28 | | |
| Zone Alarm Restore Report Codes | 29 | | |
| Zone Definitions | | | |
| 24Hr. Burglary Zones | 14 | | |
| 24Hr. Buzzer | 14 | | |
| Entry Delay 1 | 14 | | |



For technical support in Canada or the U.S., call 1-800-791-1919 for English or 1-866-912-0600 for French, Monday to Friday from 8:00 a.m. to 8:00 p.m. EST. For technical support outside Canada and the U.S. call 00-1-450-491-7444, Monday to Friday from 8:00 a.m. to 8:00 p.m. EST. Please feel free to visit our website at www.paradox.ca.

P ▲ R ▲ D O X[®]
S E C U R I T Y S Y S T E M S
780 Industriel Blvd., Saint-Eustache (Quebec) J7R 5V3 CANADA
Tel.: (450) 491-7444 www.paradox.ca Fax: (450) 491-2313

PRINTED IN CANADA 09/2004

1759MG-EI05